
CONTROL ARM BUSHINGS WITH PROTHANE STEEL OUTER SHELLS

- **Please note that your new Prothane bushings are designed to be disassembled prior to installation.**
- 1) Remove control arm from vehicle using service repair manual procedures.
- 2) Press out the complete original bushings using an arbor press or similar device.
- 3) Disassemble the new Prothane polyurethane bushings: first remove the center sleeve, and then remove both of the polyurethane bushings from the outer shell.
- 4) Press the new outer shell into the control arm. MAKE SURE TO PRESS THE NEW SHELL INTO THE CONTROL ARM SO THAT IT IS EQUALLY CENTERED IN THE ARM(See diagram).
- 5) Grease the inside of the outer steel shell and the outside of the polyurethane bushings.
- 6) Press the new bushings into the steel shell by hand.
- 7) Grease the inside of the bushings and the outside of the center sleeve.
- 8) Press the steel center sleeve into the bushings by hand.
- 9) Grease the face of the new bushings and reinstall the arm onto the vehicle.

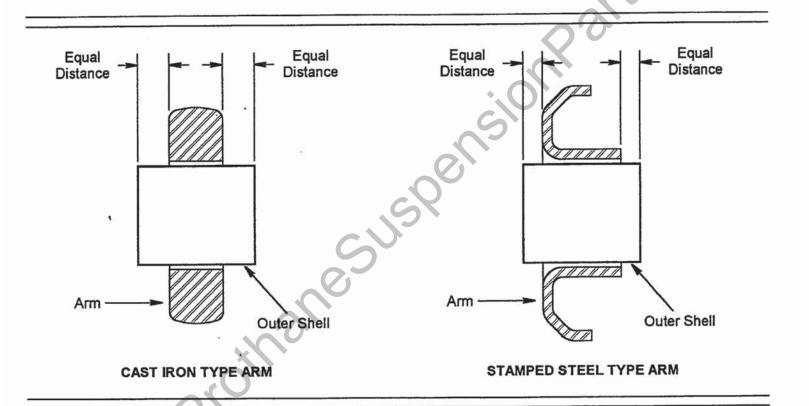

PARTS LIST FOR KIT #6-307

Part#	Description	LQh
C-10046	Upper Bushing	4
C-10047	Lwr Short Arm Bushing	4
C-10048	Lwr Long Arm Bushing	2
C-10049	Lwr Long Arm Bushing	2
19-1750-001	Super Grease	4

