INSTALLATION INSTRUCTIONS FOR SET #8-202 & #8-206

UPPER CONTROL ARM BUSHING INSTRUCTIONS

- 1) Remove the upper control arm and pivot bushing assembly from the vehicle. Separate the pivot bushing bracket by unbolting it from the upper control arm.
- 2) Remove the rubber upper control arm bushings and shells from the pivot bushing bracket.
- 3) Grease the inside diameter (I.D.) of the pivot bushing bracket (I.D. of tube) where the bushing and shell were previously removed.
- 4) Press in the new Prothane polyurethane bushings directly into the pivot bushing bracket. The new bushings must be pressed in from the outside of the pivot bushing bracket with the part numbers toward the bracket. Part numbers should be facing each other when installed. Grease the outside diameter (O.D.) of the metal sleeve and press into bushing (see diagram below).
- 5) Reassemble the control arm and pivot bushing assembly. They are now ready to be reinstalled onto vehicle.

LOWER CONTROL ARM BUSHING INSTRUCTIONS

- 1) Remove the lower control arm.
- 2) Remove the rubber lower control arm bushing and shell from the lower control arm.
- 3) Grease the I.D. of the lower control arm where the bushing and shell were previously removed.
- 4) Press in the Prothane polyurethane bushing halves directly into the lower control arm. Grease the O.D. of the metal sleeve and press into bushing (see diagram below).
- 5) The lower control arm is now ready to be reinstalled.

PARTS LIST SET #8-202			PARTS LIST SET #8-206		
PART#	DESCRIPTION	QUANTITY	PART#	DESCRIPTION	QUANTITY
#64088	Lower C-Arm Bushing	4	#64088	Lower C-Arm Bushing	
#64089	Upper C-Arm Bushing	4	#64096	Upper C-Arm Bushing	
SLV-60677	3/4" x 2.040" Sleeve	2	SLV-60677	3/4" x 2.040" Sleeve	,
SLV-60678	3/4" x 1.485" Sleeve	4	SLV-60678	3/4" x 1.485" Sleeve	7
19-1750-001	Hi- Tech Grease	2	19-1750-001		2

UPPER CONTROL ARM PIVOT BRACKET



