

INSTALLATION INSTRUCTIONS FOR SET #8-901/902/903

UPPER SHOCK/STRUT BUSHING INSTRUCTIONS

- 1) Remove the shock/strut assembly.
- 2) The upper shock/strut bushings are located in the top spring hat. Disassemble the shock/strut assembly and remove the top spring hat (**USE EXTREME CAUTION, THIS PROCEDURE SHOULD ONLY BE DONE BY A QUALIFIED PROFESSIONAL**).
- 3) In each spring hat there are two identical rubber bushings. Replace these with the Prothane polyurethane bushings reusing the original hardware.
- 4) Reassemble and reinstall the shock/strut assembly.

LOWER SHOCK/STRUT BUSHING INSTRUCTIONS

- 1) Remove the lower control arm.
- 2) Remove the rubber lower shock/strut bushing and shell from the lower control arm (See Diagram).
- 3) Grease the I.D. of the lower control arm where the bushing and shell were previously removed.
- 4) Press in the Prothane polyurethane bushing halves directly into the lower control arm. Grease the O.D. of the metal sleeve and press into bushing (see diagram below).
- 5) The lower control arm is now ready to be reinstalled.

PARTS LIST FOR SET #8-901			PARTS LIST FOR SET #8-902		
PART #	DESCRIPTION	QUANTITY	PART #	DESCRIPTION	QUANTITY
U-66033	Upper Shock Bushing	4	U-66033	Upper Shock Bushing	4
U-66034	Lower Shock Bushing	4	U-66035	Lower Shock Bushing	4
SLV-60680	3/4" ODx .482"ID x 1.950"L Sleeve	2	SLV-60679	3/4" ODx .406"ID x 1.960"L Sleeve	2
19-1750	Super Grease	1	19-1750	Super Grease	1

PARTS LIST FOR SET #8-903			PARTS LIST FOR SET #8-905		
PART #	DESCRIPTION	QUANTITY	PART #	DESCRIPTION	QUANTITY
U-66033	Upper Shock Bushing	4	U-66033	Upper Shock Bushing	4
U-66036	Lower Shock Bushing	4	U-66047	Lower Shock Bushing	4
SLV-60692	3/4" ODx .482"ID x 2.040"L Sleeve	2	SLV-60790	3/4" ODx .482"ID x 2.790"L Sleeve	2
19-1750	Super Grease	1	19-1750	Super Grease	1

PARTS LIST FOR SET #8-906		
PART #	DESCRIPTION	QUANTITY
U-66033	Upper Shock Bushing	4
U-66051	Lower Shock Bushing	4
SLV-60659	3/4" x 2.345"L Sleeve	2
19-1750	Super Grease	2

LOWER SHOCK/STRUT BUSHING
(SEE CHART)

LOWER CONTROL ARM

LOWER SHOCK/STRUT BUSHING
(SEE CHART)

DO NOT REMOVE
(LOWER CONTROL
ARM BUSHING)

SLEEVE (SEE CHART)