Motor Mount Instructions

Part: Motor Mounts
Kit#: 4-511
Vehicle(s): 91-99 Mitsubishi 3000GT; 93-96 Dodge Stealth

1-888-PROTHANE
3560 Cadillac Avenue, Costa Mesa, CA 92626

PART ID	DESCRIPTION	QTY
77018	Front Motor Mount	1
Slv-61085	1.500 X .650 X 2.435; Front Mount Sleeve	1
77019	Left Motor Mount	1
Slv-61086	1.500 X .500 X 3.650; Left Mount/Trans Mount Sleeve	2
77020	Support Motor Mount	1
Slv-61087	1.500 X .500 X 2.600; Support Mount Sleeve	1
77021	Trans Motor Mount	1

******The control arms should be off of the vehicle before you continue with these instructions*
******Please refer to your vehicles factory service manual for disassembly instructions*.

Please refer to a factory service manual before any disassembly or reassembling of your vehicle for proper instructions. Check service manual to ensure proper torque specs during installation.

Prothane bushings generally do *NOT* meet in the center. The "crush" or amount the bolt can be tightened is determined by the length of the sleeve. For all articulating bushings, make sure to apply SUPER GREASE (supplied) to *ALL SURFACES* that make contact with each bushing. For all stationary bushings we recommend applying a light coat of silicone based grease to the OD and ID of each bushing.

***REUSE* all factory hardware unless replacement pieces are supplied**

MOTOR MOUNT REMOVAL

ALL MOTOR MOUNTS

Use a hydraulic press to remove the rubber bushing and shell. The shell must be removed in order for the new urethane bushings to fit.

MOTOR MOUNT INSTALL

ALL MOTOR MOUNTS
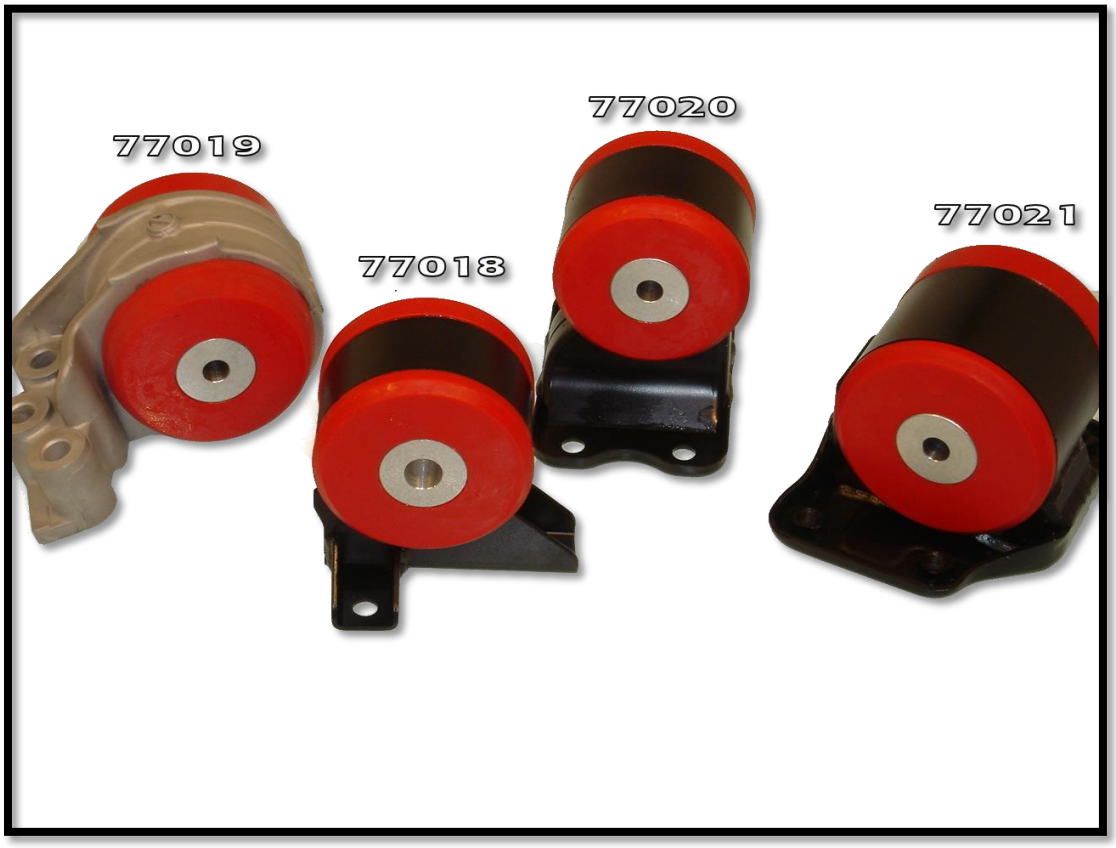
Use a hydraulic press to install the new urethane bushings. You may need a little lubrication to help squeeze the bushings in. No grease is needed for non-articulating bushings.