


INSTALLATION INSTRUCTIONS FOR KIT #1-1205 & #1-1206

- 1) Press out original rubber bushing from eyelet of track arm. Be sure to also remove the outer shell surrounding the bushing.
- 2) Deburr the inside edge of the eyelet so there are no sharp edges (See drawing below). Deburring is easily accomplished by using a round file and sandpaper.
- 3) Grease the outside of the bushing and hand press into eyelet. Grease the outside of the new metal sleeve and press into the bushings.

PARTS LIST FOR SET #1-1205		
PART #	DESCRIPTION	QUANTITY
U-61109	Track Arm Bush	2
U-60513	Ball Joint Boot	1
SLV-60711	3/4" X 1.595" Sleeve	1
TUBE	Hi-Tech Grease	1

PARTS LIST FOR SET #1-1206		
PART #	DESCRIPTION	QUANTITY
U-61109	Track Arm Bush	4
SLV-60711	3/4" X 1.595" Sleeve	2
TUBE	Hi-Tech Grease	1

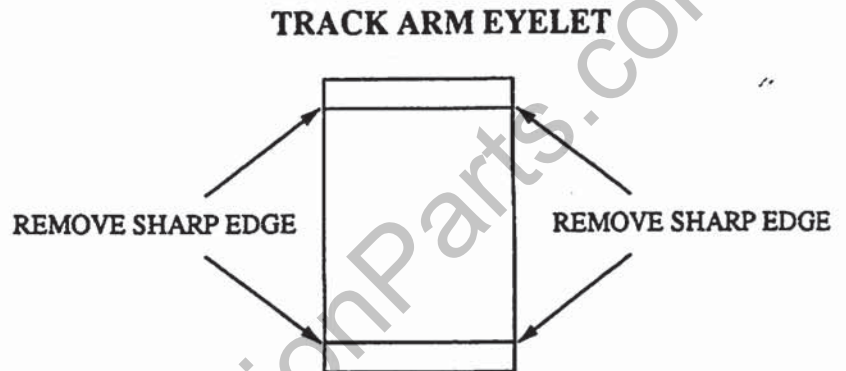


FORM 1-1205

INSTALLATION INSTRUCTIONS FOR KIT #1-1205 & #1-1206

- 1) Press out original rubber bushing from eyelet of track arm. Be sure to also remove the outer shell surrounding the bushing.
- 2) Deburr the inside edge of the eyelet so there are no sharp edges (See drawing below). Deburring is easily accomplished by using a round file and sandpaper.
- 3) Grease the outside of the bushing and hand press into eyelet. Grease the outside of the new metal sleeve and press into the bushings.

PARTS LIST FOR SET #1-1205		
PART #	DESCRIPTION	QUANTITY
U-61109	Track Arm Bush	2
U-60513	Ball Joint Boot	1
SLV-60711	3/4" X 1.595" Sleeve	1
TUBE	Hi-Tech Grease	1

PARTS LIST FOR SET #1-1206		
PART #	DESCRIPTION	QUANTITY
U-61109	Track Arm Bush	4
SLV-60711	3/4" X 1.595" Sleeve	2
TUBE	Hi-Tech Grease	1

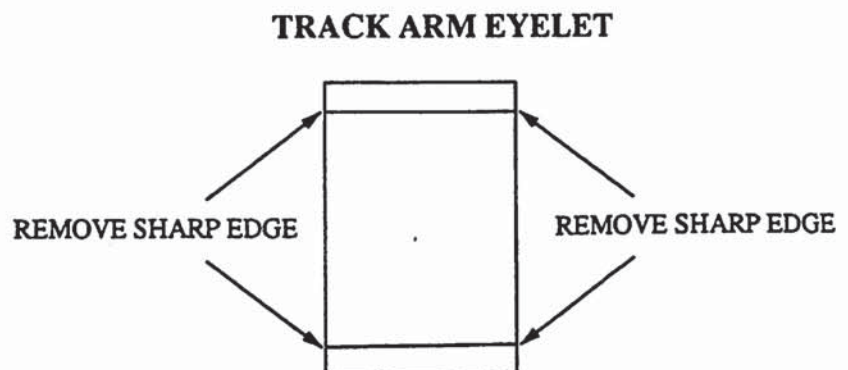

FORM 1-1205