

Installation instructions:

90-05 Mazda Miata Kit #12-1108




714.979.4990

3560 Cadillac Ave., Costa Mesa, CA 92626

Prothane Motion Control highly recommends this and all our polyurethane suspension kits be installed by a qualified automotive technician.

In the eyes of the end link you will find the stock rubber is bonded. Remove the end link from the vehicle, and then apply heat to the outside area of the eyes. Keep applying heat to the eyes until all rubber has detached itself from the I.D. All stock rubber must be removed. Make sure to apply a small amount of Prothane high-tech grease to all inner and outer diameters of the bushings. Also apply the grease to the outer diameter of the sway bar at the bushing mounting area, and on the inner diameter of the frame bushings.


 Please refer to a factory service manual before any disassembling or reassembling of your vehicle, for proper specifications. Check service manual to make sure all torque specs are properly done.

Make sure to mark any eccentrics that should be properly aligned prior to disassembly, to reference from when reassembling. re-align the vehicle after bushing have been installed.

Parts List:

- 2- U-60219 Bushings
- 4- U-62556 Bushings
- 2- BRK-10050 Mini Bracket
- 4- SLV-60750 (.625"x.395"x.940")
- 2- Wash-67
- 2 - 19-1750-001 Prothane high tech grease

Front Sway Bar Bushing Set:

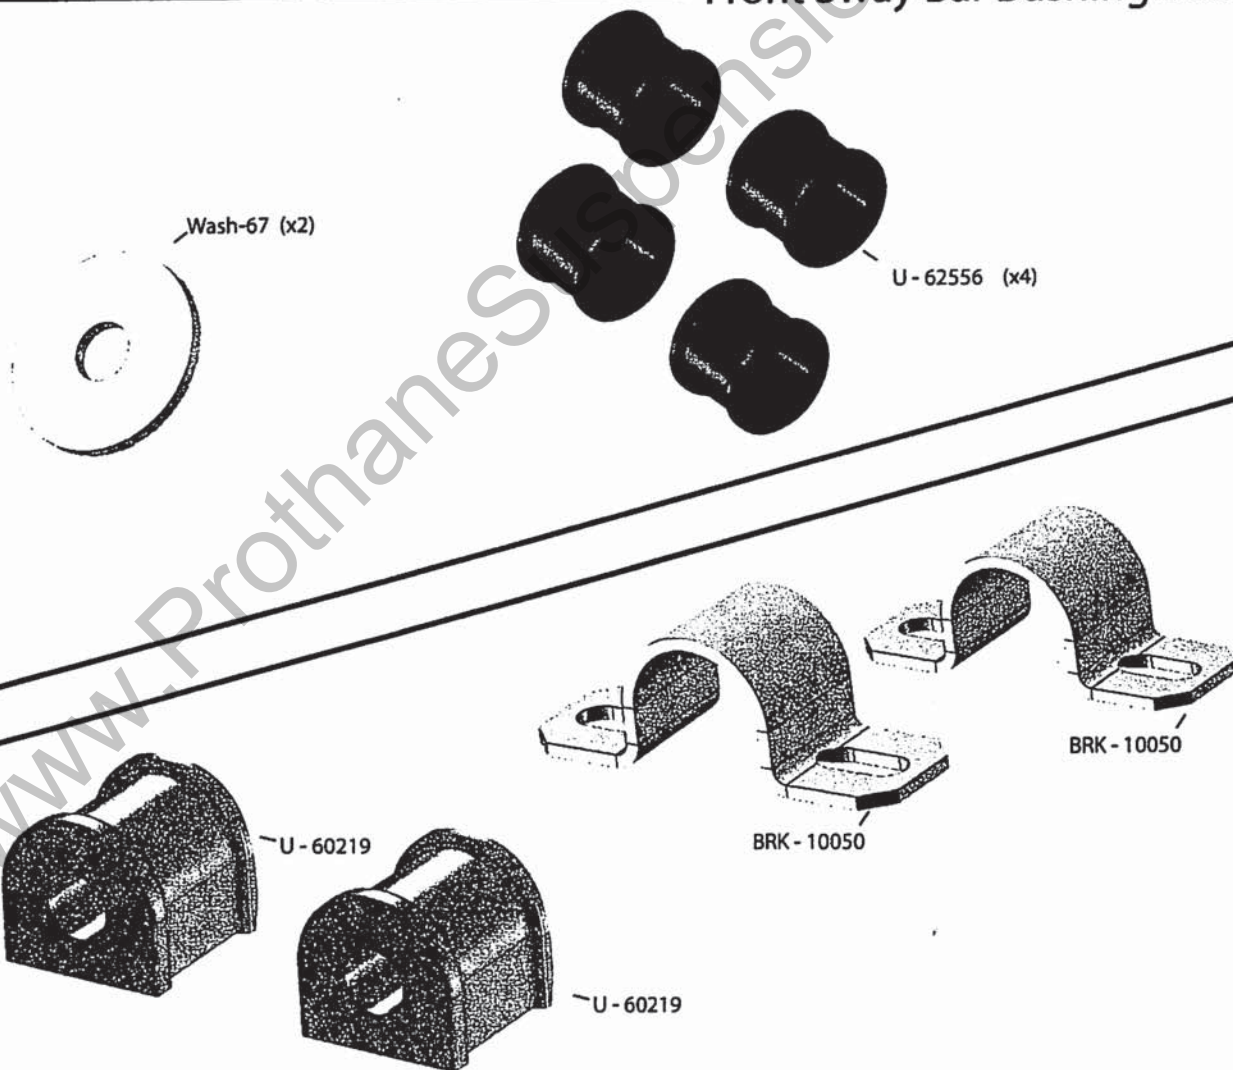

Front Sway Bar Bushing Set:

**Form #12-1108

Your vehicles parts may vary slightly from illustrations.