


INSTALLATION INSTRUCTIONS FOR NISSAN VEHICLES

PROTHANE Motion Control highly recommends this and all our polyurethane suspension kits be installed by a qualified automotive technician.

Kit #14-102 REAR SUBFRAME BUSHING INSERTS

Inserts are designed as a supplement to the original bushings. **Inserts are not a replacement.** Installation can be performed from under the vehicle. Install one position at a time. 1) With vehicle supported by jack stands, remove the retaining nut and washer from subframe bushing. 2) Install the new insert all the way into the original rubber bushing. It may help to lightly grease the insert before installation. 3) Place the supplied washer followed by the original retaining washer and nut back onto stud and tighten to factory specifications.

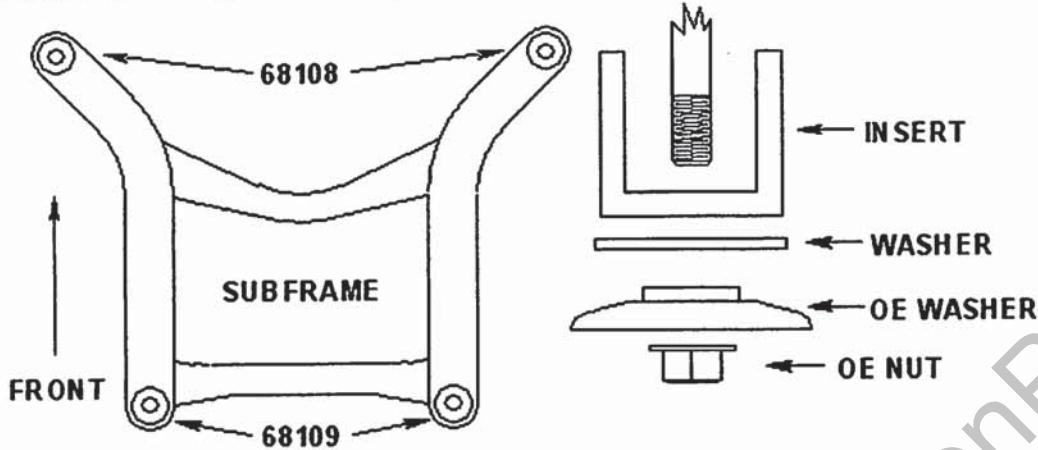

PARTS LIST FOR KIT #14-102

Part #	Description	Qty
68108	Forward Insert	2
68109	Rear Insert	2
WASH-1181	2"x9/16"x.095"	4

PROTHANE.com
MOTION CONTROL

FORM 14-102

TECHNICAL ASSISTANCE 1-888-PROTHANE


08/05 CGM

INSTALLATION INSTRUCTIONS FOR NISSAN VEHICLES

PROTHANE Motion Control highly recommends this and all our polyurethane suspension kits be installed by a qualified automotive technician.

Kit #14-102 REAR SUBFRAME BUSHING INSERTS

Inserts are designed as a supplement to the original bushings. **Inserts are not a replacement.** Installation can be performed from under the vehicle. Install one position at a time. 1) With vehicle supported by jack stands, remove the retaining nut and washer from subframe bushing. 2) Install the new insert all the way into the original rubber bushing. It may help to lightly grease the insert before installation. 3) Place the supplied washer followed by the original retaining washer and nut back onto stud and tighten to factory specifications.

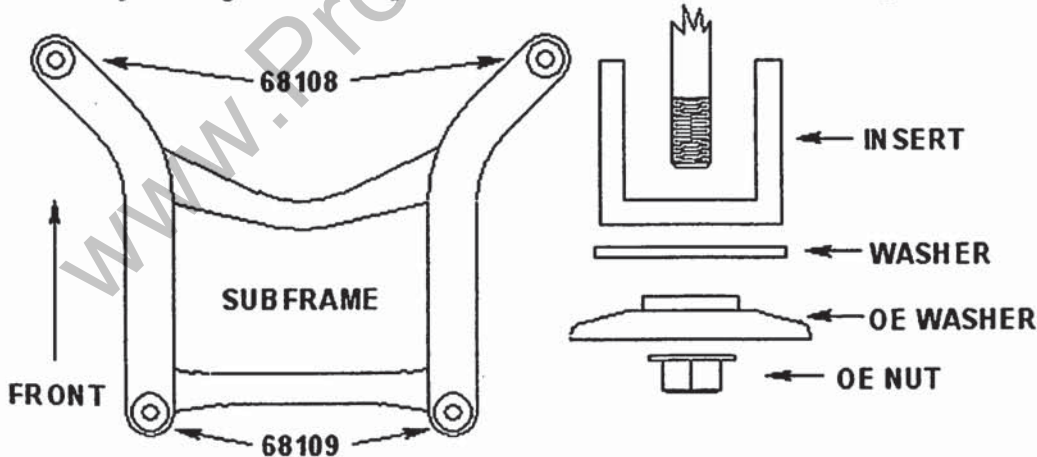

PARTS LIST FOR KIT #14-102

Part #	Description	Qty
68108	Forward Insert	2
68109	Rear Insert	2
WASH-1181	2"x9/16"x.095"	4

PROTHANE.com
MOTION CONTROL

FORM 14-102

TECHNICAL ASSISTANCE 1-888-PROTHANE

08/05 CGM