


INSTRUCTIONS FOR KIT # 4-1601 TRANSMISSION MOUNT

- 1) REMOVE TRANSMISSION MOUNT FROM VEHICLE.
- 2) REMOVE ALL ORIGINAL RUBBER FROM INSIDE OF TUBULAR SECTION OF TRANSMISSION MOUNT BRACKET.
- 3) THERE ARE TWO STYLES OF BRACKETS USED IN MANUFACTURING THESE TRANSMISSION MOUNTS. USE THE DESCRIPTIONS BELOW TO IDENTIFY WHICH STYLE BRACKET YOU HAVE. FOLLOW THE INSTRUCTIONS FOR YOUR STYLE BRACKET.
 - A) ORIGINAL EQUIPMENT STYLE BRACKET-STEP ON ONE SIDE OF TUBULAR SECTION OF BRACKET AS SHOWN IN DIAGRAM BELOW.
 - 1) USING DIAGRAM BELOW AS A GUIDELINE, INSERT POLYURETHANE BUSHINGS INTO BRACKET.
 - 2) INSERT INNER STEEL SLEEVE.
 - B) IMPORT STYLE BRACKET-NO STEP IN TUBULAR SECTION OF BRACKET.
 - 1) INSERT POLYURETHANE BUSHINGS IN EITHER END. BECAUSE THERE IS NO STEP IN TUBULAR SECTION, BUSHING WITH STEP (SEE DIAGRAM BELOW) WILL BE TIGHTER THAN THE BUSHING WITHOUT STEP. POLYURETHANE COMPOUND FOR THESE BUSHINGS IS SOFT ENOUGH TO ALLOW THE BUSHING TO COMPRESS AND FIT IN TUBULAR SECTION. THIS WILL NOT AFFECT THE PERFORMANCE OF THE BUSHING.
 - 2) INSERT INNER STEEL SLEEVE.
- 4) TRANSMISSION MOUNT IS READY TO BE REINSTALLED ON VEHICLE.

ORIGINAL EQUIPMENT STYLE BRACKET

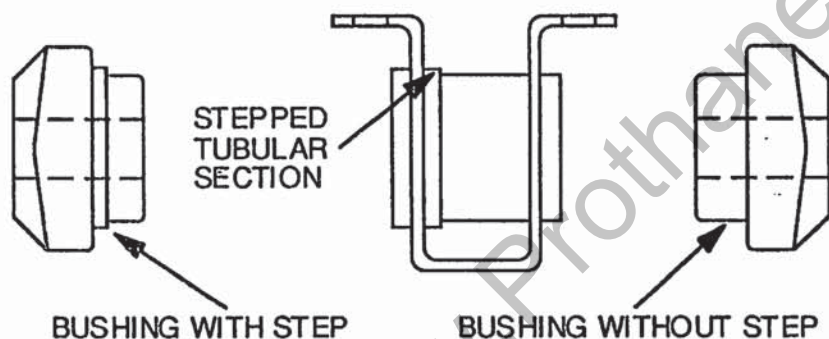

PARTS LIST FOR KIT #4-1601


PART NO.	DESCRIPTION	QUANTITY
FORM 4-1601	INSTRUCTIONS FOR #4-1601	1
SLV-60651	3/4" X 3.750" STEEL SLEEVE	1
U-69013	TRANS MOUNT W/O STEP	1
U-69017	TRANS MOUNT WITH STEP	1

FORM 4-1601

INSTRUCTIONS FOR KIT # 4-1601 TRANSMISSION MOUNT

- 1) REMOVE TRANSMISSION MOUNT FROM VEHICLE.
- 2) REMOVE ALL ORIGINAL RUBBER FROM INSIDE OF TUBULAR SECTION OF TRANSMISSION MOUNT BRACKET.
- 3) THERE ARE TWO STYLES OF BRACKETS USED IN MANUFACTURING THESE TRANSMISSION MOUNTS. USE THE DESCRIPTIONS BELOW TO IDENTIFY WHICH STYLE BRACKET YOU HAVE. FOLLOW THE INSTRUCTIONS FOR YOUR STYLE BRACKET.
 - A) ORIGINAL EQUIPMENT STYLE BRACKET-STEP ON ONE SIDE OF TUBULAR SECTION OF BRACKET AS SHOWN IN DIAGRAM BELOW.
 - 1) USING DIAGRAM BELOW AS A GUIDELINE, INSERT POLYURETHANE BUSHINGS INTO BRACKET.
 - 2) INSERT INNER STEEL SLEEVE.
 - B) IMPORT STYLE BRACKET-NO STEP IN TUBULAR SECTION OF BRACKET.
 - 1) INSERT POLYURETHANE BUSHINGS IN EITHER END. BECAUSE THERE IS NO STEP IN TUBULAR SECTION, BUSHING WITH STEP (SEE DIAGRAM BELOW) WILL BE TIGHTER THAN THE BUSHING WITHOUT STEP. POLYURETHANE COMPOUND FOR THESE BUSHINGS IS SOFT ENOUGH TO ALLOW THE BUSHING TO COMPRESS AND FIT IN TUBULAR SECTION. THIS WILL NOT AFFECT THE PERFORMANCE OF THE BUSHING.
 - 2) INSERT INNER STEEL SLEEVE.
- 4) TRANSMISSION MOUNT IS READY TO BE REINSTALLED ON VEHICLE.

ORIGINAL EQUIPMENT STYLE BRACKET

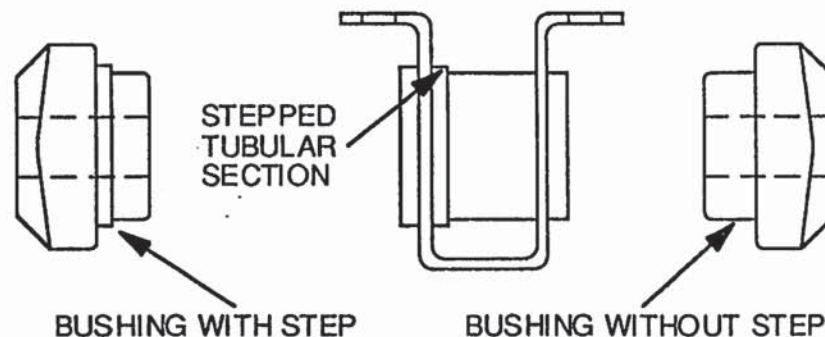

PARTS LIST FOR KIT #4-1601

PART NO.	DESCRIPTION	QUANTITY
FORM 4-1601	INSTRUCTIONS FOR #4-1601	1
SLV-60651	3/4" X 3.750" STEEL SLEEVE	1
U-69013	TRANS MOUNT W/O STEP	1
U-69017	TRANS MOUNT WITH STEP	1

FORM 4-1601