


INSTALLATION INSTRUCTIONS FOR KIT #6-1132

- 1) REMOVE REAR SWAY BAR & END LINKS FROM VEHICLE.
- 2) PRESS OUT END LINK UPPER BUSHING AND SLEEVE.
- 3) PRESS OUT END LINK LOWER BUSHING AND SHOULDER BOLT. CLEAN OFF ANY RESIDUAL RUBBER THAT MAYBE BONDED TO THE BOLT. BE CAREFUL NOT TO DAMAGE SHOULDER BOLT AS IT WILL NEED TO BE REUSED.
- 4) ASSEMBLE END LINKS AS SHOWN IN DIAGRAM.
- 5) GREASE INSIDE DIAMETER OF NEW POLYURETHANE FRAME MOUNT BUSHINGS WITH GREASE INCLUDED IN KIT AND INSTALL ONTO SWAY BAR.
- 6) REINSTALL SWAY BAR AND END LINKS ONTO VEHICLE.

PARTS LIST FOR KIT #6-1132		
PART #	DESCRIPTION	QTY
U-62116	FRAME MOUNT BUSHING	2
U-63030	UPPER LINK EYE BUSHING	4
U-63031	LOWER LINK EYE BUSHING	4
SLV-60724	5/8"ODX12MM IDX1.290" SLEEVE	2
19-1750-001	SUPER GREASE TUBE	1

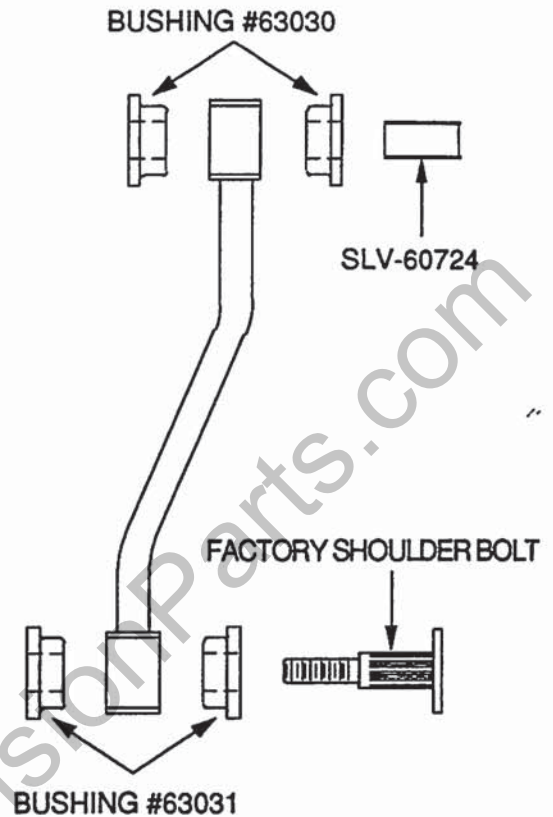


FORM 6-1132

INSTALLATION INSTRUCTIONS FOR KIT #6-1132

- 1) REMOVE REAR SWAY BAR & END LINKS FROM VEHICLE.
- 2) PRESS OUT END LINK UPPER BUSHING AND SLEEVE.
- 3) PRESS OUT END LINK LOWER BUSHING AND SHOULDER BOLT. CLEAN OFF ANY RESIDUAL RUBBER THAT MAYBE BONDED TO THE BOLT. BE CAREFUL NOT TO DAMAGE SHOULDER BOLT AS IT WILL NEED TO BE REUSED.
- 4) ASSEMBLE END LINKS AS SHOWN IN DIAGRAM.
- 5) GREASE INSIDE DIAMETER OF NEW POLYURETHANE FRAME MOUNT BUSHINGS WITH GREASE INCLUDED IN KIT AND INSTALL ONTO SWAY BAR.
- 6) REINSTALL SWAY BAR AND END LINKS ONTO VEHICLE.

PARTS LIST FOR KIT #6-1132		
PART #	DESCRIPTION	QTY
U-62116	FRAME MOUNT BUSHING	2
U-63030	UPPER LINK EYE BUSHING	4
U-63031	LOWER LINK EYE BUSHING	4
SLV-60724	5/8"ODX12MM IDX1.290" SLEEVE	2
19-1750-001	SUPER GREASE TUBE	1

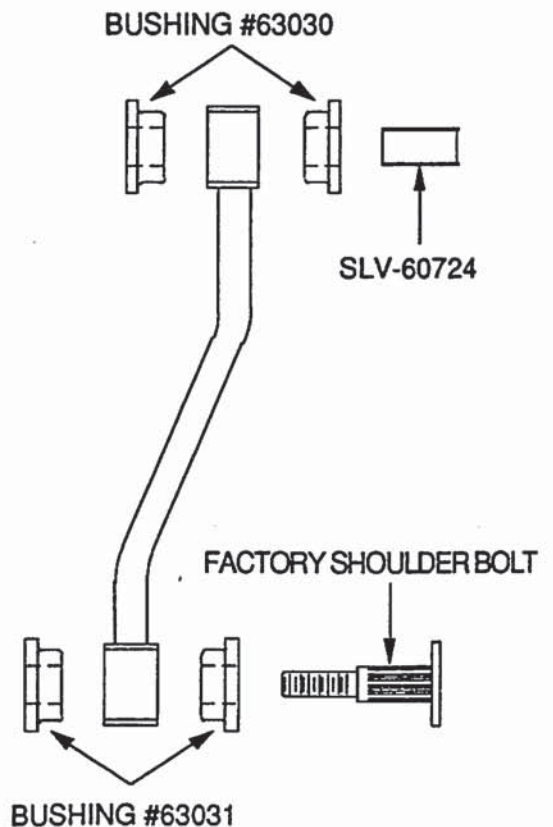

FORM 6-1132