


INSTALLATION INSTRUCTIONS FOR KIT #6-1151
92-00 FORD E250, E350 FRONT SWAY BAR BUSHING KIT

1. REMOVE FACTORY SWAY BAR END BUSHINGS AND SHELLS FROM I-BEAMS BE CAREFULL NOT TO DAMAGE OPENINGS IN I-BEAMS.
2. DE-BURR ALL SHARP EDGES FROM BOTH THE FRONT AND REAR SIDES OF THE I-BEAMS. MAKE SURE THAT ALL SURFACES MAKING CONTACT WITH THE NEW PROTHANE™ BUSHINGS ARE SMOOTH AND CLEAN.
3. GREASE THE LEADING EDGES OF BUSHINGS #63049 WITH SUPER GREASE PROVIDED IN KIT.
4. PRESS PROTHANE™ BUSHINGS INTO I-BEAM USING A C-CLAMP TO START INSTALLATION.
5. GREASE I.D. OF BUSHINGS AND O.D. OF SWAY BAR ENDS AND INSERT SWAY BAR INTO BUSHINGS.
6. GREASE I.D. OF SWAY BAR FRAME BUSHINGS AND INSTALL USING FACTORY BRACKETS.

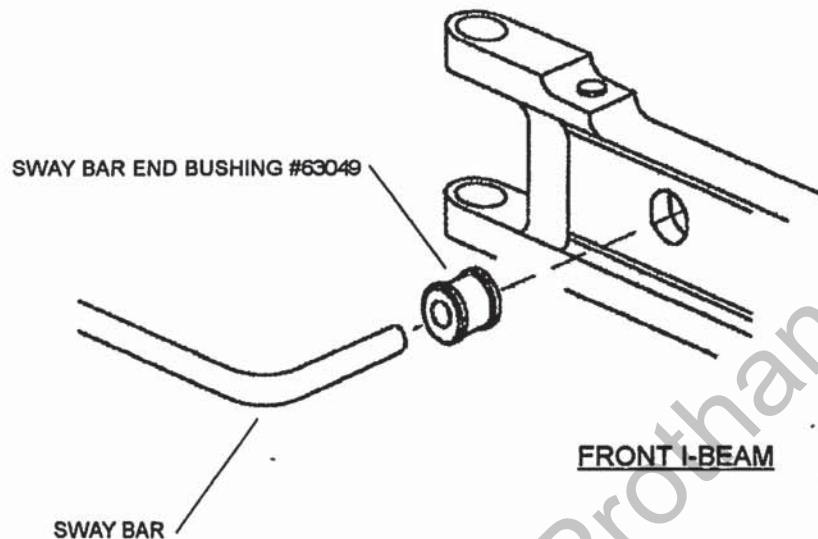


PARTS LIST FOR KIT #6-1151

<u>PART#</u>	<u>DESCRIPTION</u>	<u>QTY</u>
U-62064	FRONT SWAY BAR FRAME BUSHING	2
U-63049	FRONT SWAY BAR END BUSHING	2
19-1750-001	SUPER GREASE	2

INSTALLATION INSTRUCTIONS FOR KIT #6-1151
92-00 FORD E250, E350 FRONT SWAY BAR BUSHING KIT

1. REMOVE FACTORY SWAY BAR END BUSHINGS AND SHELLS FROM I-BEAMS BE CAREFULL NOT TO DAMAGE OPENINGS IN I-BEAMS.
2. DE-BURR ALL SHARP EDGES FROM BOTH THE FRONT AND REAR SIDES OF THE I-BEAMS. MAKE SURE THAT ALL SURFACES MAKING CONTACT WITH THE NEW PROTHANE™ BUSHINGS ARE SMOOTH AND CLEAN.
3. GREASE THE LEADING EDGES OF BUSHINGS #63049 WITH SUPER GREASE PROVIDED IN KIT.
4. PRESS PROTHANE™ BUSHINGS INTO I-BEAM USING A C-CLAMP TO START INSTALLATION.
5. GREASE I.D. OF BUSHINGS AND O.D. OF SWAY BAR ENDS AND INSERT SWAY BAR INTO BUSHINGS.
6. GREASE I.D. OF SWAY BAR FRAME BUSHINGS AND INSTALL USING FACTORY BRACKETS.

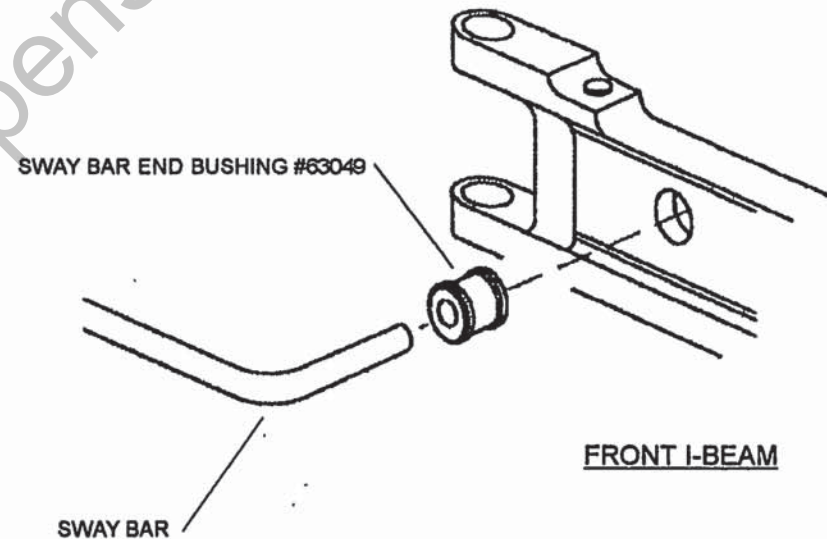

PARTS LIST FOR KIT #6-1151

<u>PART#</u>	<u>DESCRIPTION</u>	<u>QTY</u>
U-62064	FRONT SWAY BAR FRAME BUSHING	2
U-63049	FRONT SWAY BAR END BUSHING	2
19-1750-001	SUPER GREASE	2