


INSTALLATION INSTRUCTIONS FOR MUSTANG COBRA

Prothane Motion Control highly recommends this and all our polyurethane suspension kits be installed by a qualified automotive technician.

Kit #6-1610 IRS REAR DIFFERENTIAL BUSHING

- 1) Remove the rear differential mount bracket from the differential cover.
- 2) Remove the original rubber bushing from the bracket. The bushing can be pressed out with an arbor or hydraulic press. Do not damage the bracket.
- 3) Clean the inside of the bracket of any debris or grime.
- 4) Install the new bushings and sleeves as illustrated in the diagram below. No grease is required.
- 5) Reinstall the bracket and torque to factory specifications.

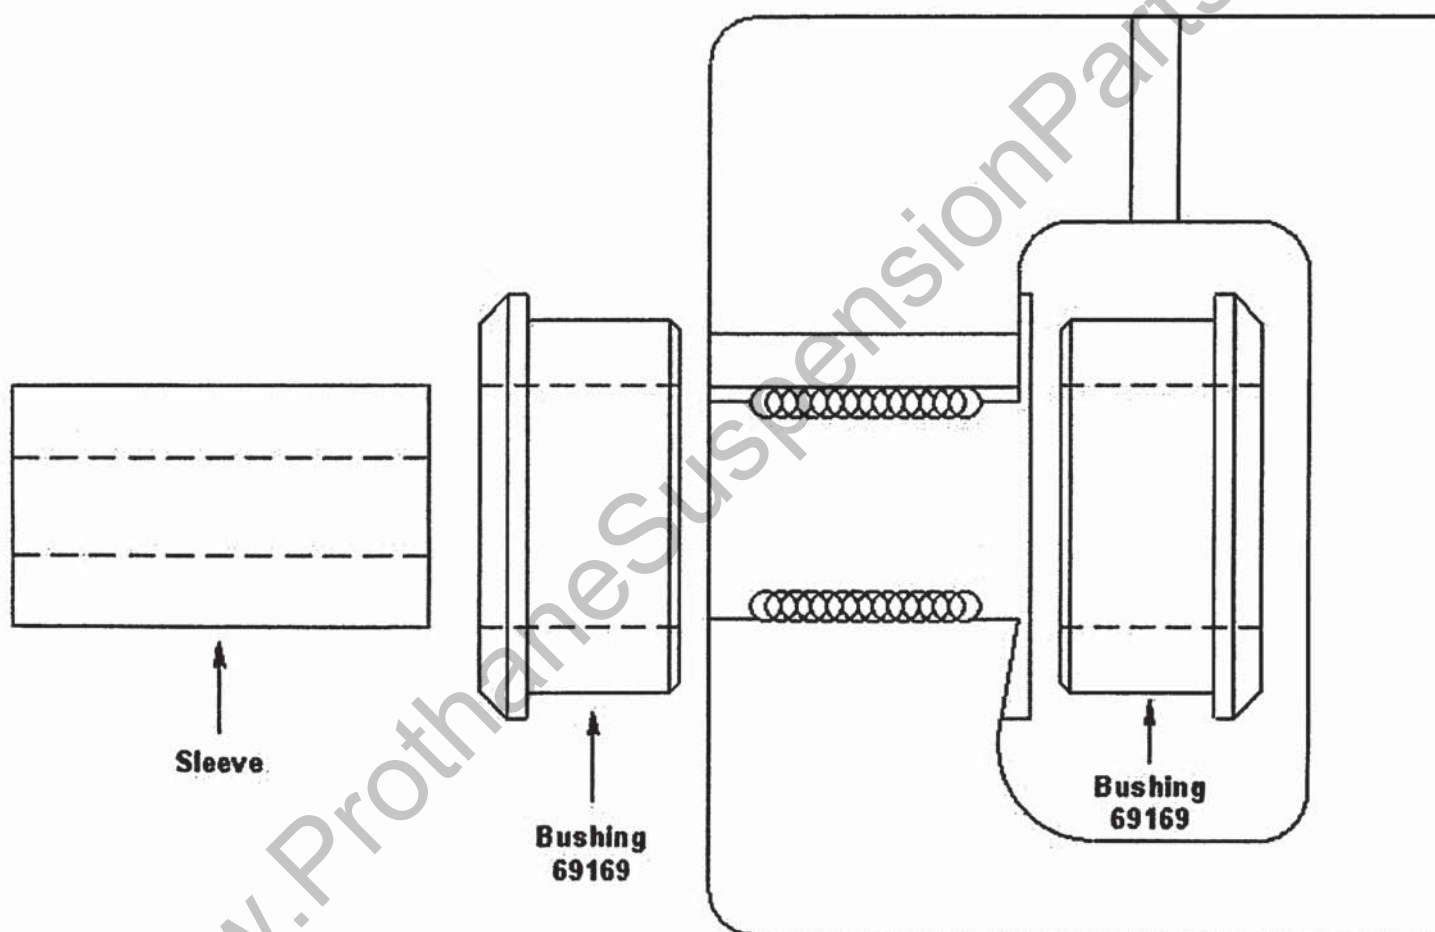

PARTS LIST FOR KIT #6-1610

Part #	Description	Qty
U-69169	Bushing	2
SLV-00930	1-1/4x.484IDx2.170"	1

