


CONTROL ARM BUSHING INSTALLATION INSTRUCTIONS

1. CONTROL ARM BUSHINGS ARE DESIGNED TO REPLACE THE RUBBER PORTION OF THE ORIGINAL BUSHING (AND INNER SLEEVE WHEN SUPPLIED). THEREFORE THE ORIGINAL OUTER METAL SHELLS, WASHERS, SPACERS AND SPECIAL WASHERS AND SLEEVES THAT ARE USED WITH CAM BOLT TYPE BUSHINGS MUST BE REUSED. ALSO IF INNER METAL SLEEVE IS NOT INCLUDED IN KIT, THEN THE ORIGINAL INNER SLEEVE MUST BE REUSED.
2. DISASSEMBLE CONTROL ARM, BEING CAREFUL NOT TO DAMAGE ANY PARTS THAT ARE TO BE REUSED. REMOVAL OF THE ORIGINAL RUBBER BUSHING IS BEST ACCOMPLISHED BY BURNING AWAY THE ORIGINAL RUBBER. PAY CAREFUL ATTENTION TO OTHER ADJOINING PARTS THAT COULD BE DAMAGED BY HEAT. CAUTION-THIS SHOULD BE DONE BY A QUALIFIED SPECIALIST AS IT IS EXTREMELY DANGEROUS.
3. REMOVE ALL OF THE ORIGINAL RUBBER BUSHING MATERIAL AND CLEAN CONTACT SURFACES. THIS CAN BE DONE BY WIRE BRUSHING, SANDING OR SIMILAR PROCESS.
4. DISASSEMBLE NEW URETHANE BUSHINGS. LIGHTLY GREASE BUSHINGS AS DIAGRAM INDICATES WITH SPECIAL TEFLON GREASE INCLUDED IN KIT. IF MORE GREASE IS NEEDED, OBTAIN TEFLON GREASE FROM YOUR DEALER (PART #19-1750). USE ONLY OUR SPECIAL TEFLON GREASE.
5. INSTALL NEW URETHANE BUSHINGS AND ALL NECESSARY WASHERS, SPACERS AND SLEEVES. TORQUE TO FACTORY SPECIFICATIONS.
6. RE-ALIGN VEHICLE.
7. AFTER DRIVING VEHICLE FOR APPROXIMATELY 50 MILES, RE TORQUE BUSHING RETAINING NUTS AND OR BOLTS TO BE SURE THEY HAVE NOT LOOSENED DUE TO THE BUSHINGS SETTLING IN. REPEAT THIS PROCEDURE AFTER VEHICLE IS RACED, DRIVEN OFFROAD OR DRIVEN IN ABUSIVE CONDITIONS.

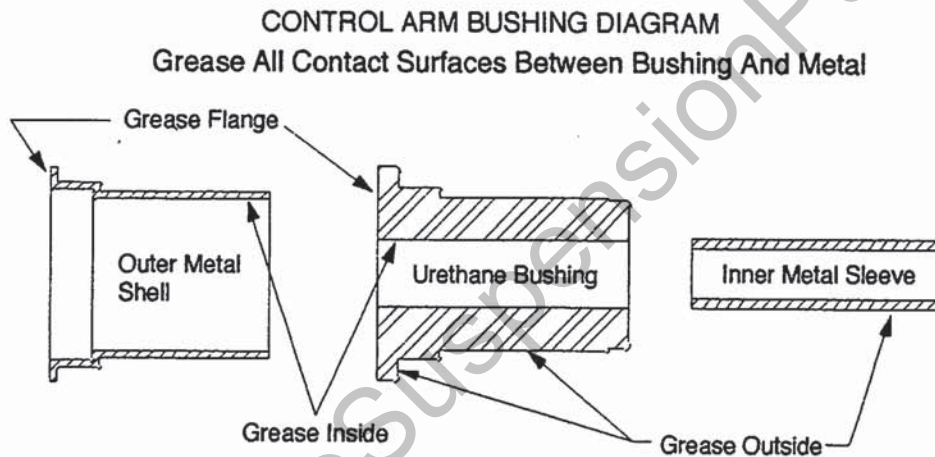

<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">NUMBER</th> <th style="text-align: left;">6-202 DESC</th> <th style="text-align: left;">QTY</th> </tr> </thead> <tbody> <tr> <td>19-1750-001</td> <td>SUPER GREASE</td> <td>1</td> </tr> <tr> <td>SLV-60508</td> <td>3/4" X 2.110"</td> <td>2</td> </tr> <tr> <td>U-60142</td> <td>C-ARM BUSH 1 7/16"</td> <td>2</td> </tr> </tbody> </table>	NUMBER	6-202 DESC	QTY	19-1750-001	SUPER GREASE	1	SLV-60508	3/4" X 2.110"	2	U-60142	C-ARM BUSH 1 7/16"	2	<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">NUMBER</th> <th style="text-align: left;">6-203 DESC</th> <th style="text-align: left;">QTY</th> </tr> </thead> <tbody> <tr> <td>19-1750-001</td> <td>SUPER GREASE</td> <td>1</td> </tr> <tr> <td>SLV-60508</td> <td>3/4" X 2.110"</td> <td>2</td> </tr> <tr> <td>U-60145</td> <td>C-ARM BUSH</td> <td>2</td> </tr> </tbody> </table>	NUMBER	6-203 DESC	QTY	19-1750-001	SUPER GREASE	1	SLV-60508	3/4" X 2.110"	2	U-60145	C-ARM BUSH	2	<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">NUMBER</th> <th style="text-align: left;">3-201 DESC</th> <th style="text-align: left;">QTY</th> </tr> </thead> <tbody> <tr> <td>19-1750-001</td> <td>SUPER GREASE</td> <td>1</td> </tr> <tr> <td>SLV-60645</td> <td>7/8" X 2.050"</td> <td>2</td> </tr> <tr> <td>SLV-60646</td> <td>3/4" X 1.855"</td> <td>2</td> </tr> <tr> <td>SLV-60647</td> <td>3/4" X 1.710"</td> <td>2</td> </tr> <tr> <td>U-64047</td> <td>FT. C-ARM</td> <td>4</td> </tr> <tr> <td>U-65020</td> <td>FT STRUT LRG.FT HALF</td> <td>2</td> </tr> <tr> <td>U-65021</td> <td>FT STRUT SML.RR HALF</td> <td>2</td> </tr> <tr> <td>U-65006</td> <td>FT STRUT SML</td> <td>4</td> </tr> </tbody> </table>	NUMBER	3-201 DESC	QTY	19-1750-001	SUPER GREASE	1	SLV-60645	7/8" X 2.050"	2	SLV-60646	3/4" X 1.855"	2	SLV-60647	3/4" X 1.710"	2	U-64047	FT. C-ARM	4	U-65020	FT STRUT LRG.FT HALF	2	U-65021	FT STRUT SML.RR HALF	2	U-65006	FT STRUT SML	4
NUMBER	6-202 DESC	QTY																																																			
19-1750-001	SUPER GREASE	1																																																			
SLV-60508	3/4" X 2.110"	2																																																			
U-60142	C-ARM BUSH 1 7/16"	2																																																			
NUMBER	6-203 DESC	QTY																																																			
19-1750-001	SUPER GREASE	1																																																			
SLV-60508	3/4" X 2.110"	2																																																			
U-60145	C-ARM BUSH	2																																																			
NUMBER	3-201 DESC	QTY																																																			
19-1750-001	SUPER GREASE	1																																																			
SLV-60645	7/8" X 2.050"	2																																																			
SLV-60646	3/4" X 1.855"	2																																																			
SLV-60647	3/4" X 1.710"	2																																																			
U-64047	FT. C-ARM	4																																																			
U-65020	FT STRUT LRG.FT HALF	2																																																			
U-65021	FT STRUT SML.RR HALF	2																																																			
U-65006	FT STRUT SML	4																																																			
<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">NUMBER</th> <th style="text-align: left;">7-301 DESC</th> <th style="text-align: left;">QTY</th> </tr> </thead> <tbody> <tr> <td>19-1750-001</td> <td>SUPER GREASE</td> <td>1</td> </tr> <tr> <td>SLV-60581</td> <td>1" X 2.690"</td> <td>2</td> </tr> <tr> <td>U-60375</td> <td>C-ARM BUSH</td> <td>2</td> </tr> </tbody> </table>	NUMBER	7-301 DESC	QTY	19-1750-001	SUPER GREASE	1	SLV-60581	1" X 2.690"	2	U-60375	C-ARM BUSH	2	<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">NUMBER</th> <th style="text-align: left;">7-302 DESC</th> <th style="text-align: left;">QTY</th> </tr> </thead> <tbody> <tr> <td>19-1750-001</td> <td>SUPER GREASE</td> <td>1</td> </tr> <tr> <td>SLV-60580</td> <td>7/8" X 1.690"</td> <td>2</td> </tr> <tr> <td>U-60372</td> <td>TRACK ARM BUSH</td> <td>4</td> </tr> </tbody> </table>	NUMBER	7-302 DESC	QTY	19-1750-001	SUPER GREASE	1	SLV-60580	7/8" X 1.690"	2	U-60372	TRACK ARM BUSH	4	<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">NUMBER</th> <th style="text-align: left;">7-303 DESC</th> <th style="text-align: left;">QTY</th> </tr> </thead> <tbody> <tr> <td>19-1750-001</td> <td>SUPER GREASE</td> <td>1</td> </tr> <tr> <td>SLV-60614</td> <td>3/4" X 2.015"</td> <td>2</td> </tr> <tr> <td>U-64082</td> <td>REAR TRAILING ARM</td> <td>4</td> </tr> <tr> <td>WASH-1179</td> <td>7/16" FLAT WASHER</td> <td>4</td> </tr> </tbody> </table>	NUMBER	7-303 DESC	QTY	19-1750-001	SUPER GREASE	1	SLV-60614	3/4" X 2.015"	2	U-64082	REAR TRAILING ARM	4	WASH-1179	7/16" FLAT WASHER	4												
NUMBER	7-301 DESC	QTY																																																			
19-1750-001	SUPER GREASE	1																																																			
SLV-60581	1" X 2.690"	2																																																			
U-60375	C-ARM BUSH	2																																																			
NUMBER	7-302 DESC	QTY																																																			
19-1750-001	SUPER GREASE	1																																																			
SLV-60580	7/8" X 1.690"	2																																																			
U-60372	TRACK ARM BUSH	4																																																			
NUMBER	7-303 DESC	QTY																																																			
19-1750-001	SUPER GREASE	1																																																			
SLV-60614	3/4" X 2.015"	2																																																			
U-64082	REAR TRAILING ARM	4																																																			
WASH-1179	7/16" FLAT WASHER	4																																																			
<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">NUMBER</th> <th style="text-align: left;">7-304 DESC</th> <th style="text-align: left;">QTY</th> </tr> </thead> <tbody> <tr> <td>19-1750-001</td> <td>SUPER GREASE</td> <td>1</td> </tr> <tr> <td>SLV-60599</td> <td>3/4" X 2.120"</td> <td>4</td> </tr> <tr> <td>U-64293</td> <td>REAR LOWER C-ARM</td> <td>4</td> </tr> </tbody> </table>	NUMBER	7-304 DESC	QTY	19-1750-001	SUPER GREASE	1	SLV-60599	3/4" X 2.120"	4	U-64293	REAR LOWER C-ARM	4	<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">NUMBER</th> <th style="text-align: left;">6-205 DESC</th> <th style="text-align: left;">QTY</th> </tr> </thead> <tbody> <tr> <td>19-1750-001</td> <td>SUPER GREASE</td> <td>1</td> </tr> <tr> <td>SLV-60502</td> <td>7/8" X 3.000"</td> <td>2</td> </tr> <tr> <td>SLV-60511</td> <td>7/8" X 3.160"</td> <td>2</td> </tr> <tr> <td>U-60146</td> <td>C-ARM BUSH</td> <td>2</td> </tr> <tr> <td>U-60147</td> <td>C-ARM BUSH</td> <td>2</td> </tr> </tbody> </table>	NUMBER	6-205 DESC	QTY	19-1750-001	SUPER GREASE	1	SLV-60502	7/8" X 3.000"	2	SLV-60511	7/8" X 3.160"	2	U-60146	C-ARM BUSH	2	U-60147	C-ARM BUSH	2	<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">NUMBER</th> <th style="text-align: left;">3-202 DESC.</th> <th style="text-align: left;">QTY</th> </tr> </thead> <tbody> <tr> <td>19-1750-001</td> <td>SUPER GREASE</td> <td>1</td> </tr> <tr> <td>SLV-60518</td> <td>9/16" X 1.625"</td> <td>2</td> </tr> <tr> <td>SLV-60643</td> <td>3/4" X 2.700"</td> <td>2</td> </tr> <tr> <td>U-64046</td> <td>RR C-ARM BUSH</td> <td>4</td> </tr> <tr> <td>U-69015</td> <td>RR DIFF MOUNT</td> <td>2</td> </tr> </tbody> </table>	NUMBER	3-202 DESC.	QTY	19-1750-001	SUPER GREASE	1	SLV-60518	9/16" X 1.625"	2	SLV-60643	3/4" X 2.700"	2	U-64046	RR C-ARM BUSH	4	U-69015	RR DIFF MOUNT	2			
NUMBER	7-304 DESC	QTY																																																			
19-1750-001	SUPER GREASE	1																																																			
SLV-60599	3/4" X 2.120"	4																																																			
U-64293	REAR LOWER C-ARM	4																																																			
NUMBER	6-205 DESC	QTY																																																			
19-1750-001	SUPER GREASE	1																																																			
SLV-60502	7/8" X 3.000"	2																																																			
SLV-60511	7/8" X 3.160"	2																																																			
U-60146	C-ARM BUSH	2																																																			
U-60147	C-ARM BUSH	2																																																			
NUMBER	3-202 DESC.	QTY																																																			
19-1750-001	SUPER GREASE	1																																																			
SLV-60518	9/16" X 1.625"	2																																																			
SLV-60643	3/4" X 2.700"	2																																																			
U-64046	RR C-ARM BUSH	4																																																			
U-69015	RR DIFF MOUNT	2																																																			