

GENERAL BODY MOUNT ASSEMBLY INSTRUCTIONS

- 1) NOTE ALL BODY MOUNT POSITIONS AND RESPECTIVE PARTS (MOUNT SIZE/TYPE, WASHERS, SPACERS, BOLTS, SHIMS, ETC.) BEFORE AND DURING DISASSEMBLY. YOU MAY HAVE TO REUSE CERTAIN FACTORY HARDWARE PIECES THAT ARE NOT INCLUDED IN KIT.
- 2) IF MOUNTING BOLTS AND NUTS ARE RUSTED, LIBERALLY SPRAY WITH PENETRATING OIL IE. WD-40.
- 3) SUPPORT VEHICLE BODY PROPERLY BEFORE REMOVING MOUNTS. USE A 2"x4" PIECE OF WOOD 24" LONG (OR ANY OTHER SUITABLE SIZE) BETWEEN JACK AND BODY PANEL TO SPREAD THE WEIGHT LOAD OUT SO AS NOT TO DAMAGE THE BODY PANELS. IF NECESSARY, SUPPORT BODY IN SEVERAL AREAS.
- 4) LOOSEN ALL BOLTS AND NUTS BUT DO NOT REMOVE. (SEE SPECIAL DISASSEMBLY DIAGRAM FOR FORD ONLY).
- 5) WORKING FROM ONLY ONE SIDE OF VEHICLE AT A TIME REMOVE MOUNTING BOLT AND NUT AND RAISE BODY ONLY HIGH ENOUGH TO REPLACE MOUNT, NEVER HIGHER. ALSO CHECK OTHER AREAS ON BODY AND FRAME TO AVOID ANY INTERFERENCE PROBLEMS WHEN RAISING BODY.
- 6) REPLACE MOUNTS ONE AT A TIME. IF NECESSARY, A DIAGRAM HAS BEEN PROVIDED FOR INFORMATION AS TO WHICH MOUNTS, WASHERS, SLEEVES AND BOLTS TO USE FOR EACH POSITION. INSTALL BOLTS BUT DO NOT TIGHTEN UNTIL ALL MOUNTS HAVE BEEN REPLACED.
- 7) AFTER ALL MOUNTS HAVE BEEN REPLACED, TORQUE BOLTS TO FACTORY SPECIFICATIONS.
- 8) AFTER DRIVING VEHICLE FOR ABOUT 1000 MILES OR OFF ROADING RE-TORQUE BOLTS AGAIN. THIS IS TO INSURE THAT THE BOLTS HAVE NOT LOOSENED DUE TO INITIAL SETTLING THAT MAY TAKE PLACE.

PARTS ASSEMBLY LIST FOR 7-121 & 7-122

MOUNTING POSITIONS ARE NUMBERED STARTING WITH #1 FOR THE MOST FORWARD POSITION TOWARD THE FRONT OF THE VEHICLE AND RESPECTIVELY HIGHER NUMBERS TOWARD THE REAR OF THE VEHICLE.

PARTS ARE LISTED FROM TOP (#1) TO BOTTOM.

#1 MOUNT (SEE TOP RIGHT DIAGRAM)

- 1) 2"OD x 7/16"ID WASHER
- 2) UPPER MOUNT #68038
- 3) LOWER MOUNT #68039
- 4) 3/4"OD X 9/16"ID X 1.200" STEEL SLEEVE
- 5) 2"OD X 7/16"ID WASHER

#3 MOUNT (SEE BOTTOM RIGHT DIAGRAM)

- 1) 2"OD X 3/4"ID WASHER
- 2) UPPER MOUNT #68040
- 3) 7/8" X .712"ID X 1.200" STEEL SLEEVE
- 4) LOWER MOUNT #68041
- 5) 2"OD X 7/16"ID WASHER


#2A, #2B (CONVERTIBLE ONLY)*, #4, #5, #6, #7 MOUNTS (SEE BOTTOM RIGHT DIAGRAM)

- 1) 2"OD X 7/16"ID WASHER
- 2) UPPER MOUNT #68037
- 3) 3/4"OD X 9/16"ID X 1.200" STEEL SLEEVE
- 4) LOWER MOUNT #68038
- 5) 2"OD X 7/16"ID WASHER

*SPECIAL NOTE: 1) #2A & #2B ARE ADJACENT (SIDE BY SIDE)
2) #2B IS USED FOR CONVERTIBLES ONLY

PARTS LIST FOR 7-121 & 7-121			
PART #	DESCRIPTION	QTY/7-121	QTY/7-122
U-68037	BODY MOUNT	12	12
U-68038	BODY MOUNT	14	14
U-68039	BODY MOUNT	2	2
U-68040	BODY MOUNT	2	2
U-68041	BODY MOUNT	2	2
WASH-1158	2"ODX7/16"ID WASHER	26	30
WASH-1175	2"ODX3/4"ID WASHER	2	2
SLV-60661	3/4"X9/16"X1.2" SLEEVE	12	14
SLV-60662	7/8"X.712"X1.2" SLEEVE	2	2

#1 POSITION BODY MOUNT

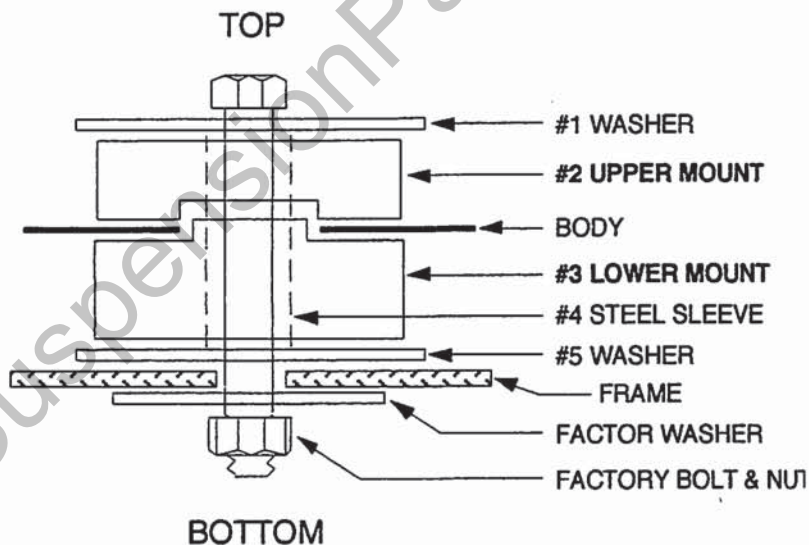

#2 THRU #7 POSITION BODY MOUNTS

