

INSTRUCTIONS FOR # 7-1604 TRANSMISSION MOUNT


1) URETHANE MOUNT WILL FIT BOTH ONE OR TWO STUD TYPE OF MOUNT TO CROSSMEMBER APPLICATIONS. DETERMINE WHICH TYPE IS ON VEHICLE. INSTALL THE SUPPLIED STUDS (7/16" X 1 1/2") INTO THE APPROPRIATE HOLES BY "DOUBLE NUTTING" THE END OF A STUD, THEN SCREW IN AND FIRMLY SEAT IN PLACE. INSTALL URETHANE MOUNT.

2) INSTALL (MOUNT TO CROSSMEMBER) FLAT WASHERS, LOCK WASHERS AND NUTS SUPPLIED IN THIS KIT, AS SHOWN IN DIAGRAM BELOW. DO NOT TIGHTEN NUTS AT THIS TIME.

3) INSTALL, BUT DO NOT TIGHTEN THE MOUNT TO TRANSMISSION BOLTS. USE THE ORIGINAL FACTORY HARDWARE FOR THIS LOCATION.

4) ALIGN THE URETHANE MOUNT WITH THE TRANSMISSION AND CROSSMEMBER. TIGHTEN AND TORQUE BOLTS TO FACTORY SPECIFICATIONS.

URETHANE MOUNT DIAGRAM

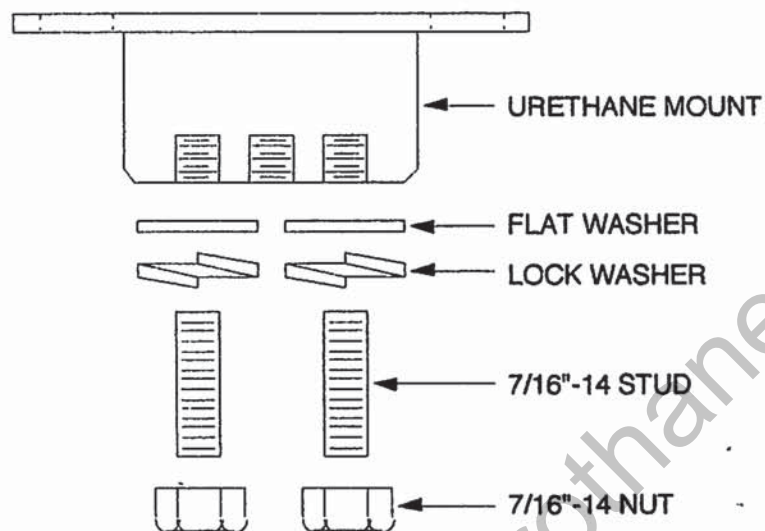

PART NO.	DESCRIPTION	QTY
FORM 7-1604	INSTRUCTIONS	1
U-69018	URETHANE MOUNT	1
STUD-34	7/16"-14 X 1 1/2" STUD	2
NUT-71	7/16"-14 NUT	2
WASH-51	7/16" LOCK WASHER	2
WASH-1147	7/16" FLAT WASHER	2

INSTRUCTIONS FOR # 7-1604 TRANSMISSION MOUNT


1) URETHANE MOUNT WILL FIT BOTH ONE OR TWO STUD TYPE OF MOUNT TO CROSSMEMBER APPLICATIONS. DETERMINE WHICH TYPE IS ON VEHICLE. INSTALL THE SUPPLIED STUDS (7/16" X 1 1/2") INTO THE APPROPRIATE HOLES BY "DOUBLE NUTTING" THE END OF A STUD, THEN SCREW IN AND FIRMLY SEAT IN PLACE. INSTALL URETHANE MOUNT.

2) INSTALL (MOUNT TO CROSSMEMBER) FLAT WASHERS, LOCK WASHERS AND NUTS SUPPLIED IN THIS KIT, AS SHOWN IN DIAGRAM BELOW. DO NOT TIGHTEN NUTS AT THIS TIME.

3) INSTALL, BUT DO NOT TIGHTEN THE MOUNT TO TRANSMISSION BOLTS. USE THE ORIGINAL FACTORY HARDWARE FOR THIS LOCATION.

4) ALIGN THE URETHANE MOUNT WITH THE TRANSMISSION AND CROSSMEMBER. TIGHTEN AND TORQUE BOLTS TO FACTORY SPECIFICATIONS.

URETHANE MOUNT DIAGRAM

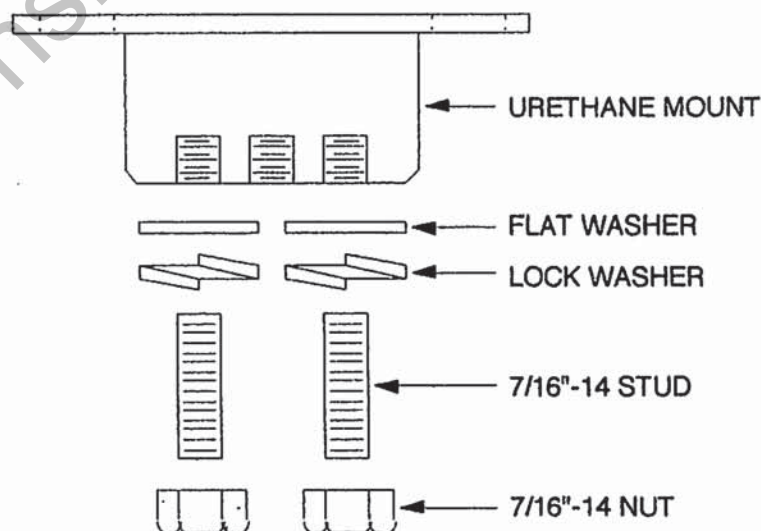

PART NO.	DESCRIPTION	QTY
FORM 7-1604	INSTRUCTIONS	1
U-69018	URETHANE MOUNT	1
STUD-34	7/16"-14 X 1 1/2" STUD	2
NUT-71	7/16"-14 NUT	2
WASH-51	7/16" LOCK WASHER	2
WASH-1147	7/16" FLAT WASHER	2