

INSTALLATION INSTRUCTIONS FOR SET #8-302 & #8-303

REAR LOWER CONTROL ARM BUSHING INSTRUCTIONS

- 1) Remove the lower control arm.
- 2) Remove the rubber lower control arm bushings and shells from the lower control arm.
- 3) Grease the I.D. of the lower control arm where the bushings and shells were previously removed.
- 4) Press in the Prothane polyurethane bushing halves directly into the lower control arm. Grease the O.D. of the metal sleeve and press into bushing (see diagram below).
- 5) The lower control arm is now ready to be reinstalled.

PARTS LIST FOR SET #8-302


PART #	DESCRIPTION	QUANTITY
U-64087	Rear Lower C-Arm Bush	8
SLV-60679	3/4" X 1.960" Sleeve	4
19-1750-001	Hi-Tech Grease	2

PARTS LIST FOR SET #8-303

PART #	DESCRIPTION	QUANTITY
U-64097	Rear Lower C-Arm Bush	8
SLV-60679	3/4" X 1.960" Sleeve	4
19-1750-001	Hi-Tech Grease	2

SET#	BUSHING#
8-302	64087
8-303	64097

REAR LOWER CONTROL ARM

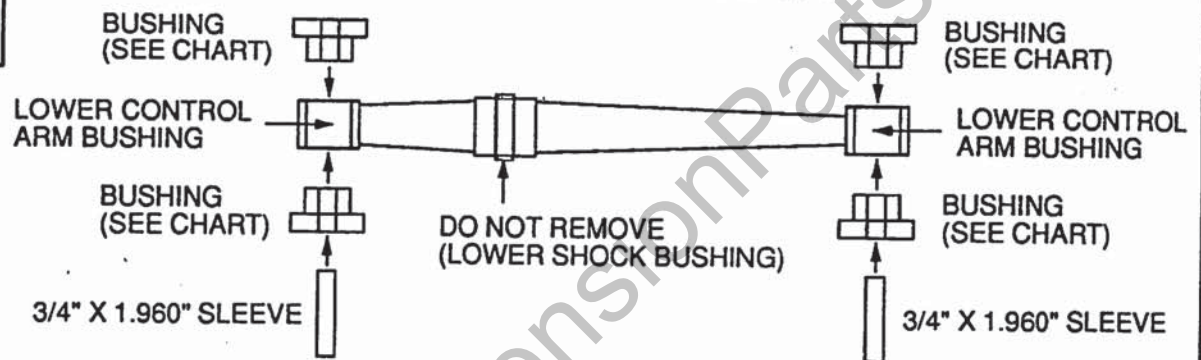

FORM 8-302

INSTALLATION INSTRUCTIONS FOR SET #8-302 & #8-303

REAR LOWER CONTROL ARM BUSHING INSTRUCTIONS

- 1) Remove the lower control arm.
- 2) Remove the rubber lower control arm bushings and shells from the lower control arm.
- 3) Grease the I.D. of the lower control arm where the bushings and shells were previously removed.
- 4) Press in the Prothane polyurethane bushing halves directly into the lower control arm. Grease the O.D. of the metal sleeve and press into bushing (see diagram below).
- 5) The lower control arm is now ready to be reinstalled.

PARTS LIST FOR SET #8-302


PART #	DESCRIPTION	QUANTITY
U-64087	Rear Lower C-Arm Bush	8
SLV-60679	3/4" X 1.960" Sleeve	4
19-1750-001	Hi-Tech Grease	2

PARTS LIST FOR SET #8-303

PART #	DESCRIPTION	QUANTITY
U-64097	Rear Lower C-Arm Bush	8
SLV-60679	3/4" X 1.960" Sleeve	4
19-1750-001	Hi-Tech Grease	2

SET#	BUSHING#
8-302	64087
8-303	64097

REAR LOWER CONTROL ARM

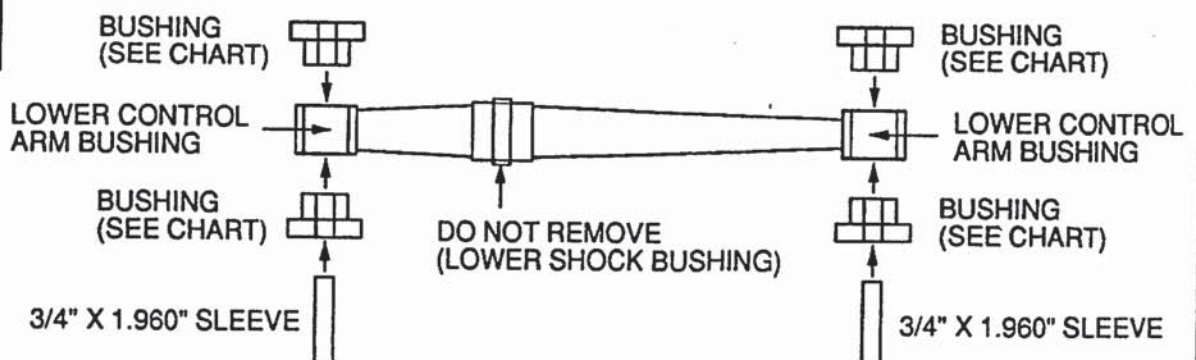

FORM 8-302