

**CATALOG SUPPLEMENT**

**PROTHANE**  
MOTION CONTROL

**HIGH PERFORMANCE URETHANE**



**FOR ALL CARS AND TRUCKS**

This is a Supplement to the PROTHANE™ Suspension - Driveline - Chassis Catalog.


For 2013, we have expanded our product line by adding many new products and vehicle applications! These new products are featured in this Supplement and we've included several of our more popular and "important to know" exclusive PROTHANE Products. The balance of our product line is found in CATALOG #12.

**NOTE:** that all part numbers listed are for RED kits and if BLACK is desired, you must add the code -BL to the end of the part number.

## Universal Applications

### 90° Greaseable Sway Bar

**Bushings** PROTHANE™ Urethane 90° Universal Greaseable Sway Bar Bushings allow the ease of lubrication in tight areas without disassembly. Each pair includes heavy duty brackets. Use the below diagram measurements for the bracket style that best suits your requirements.

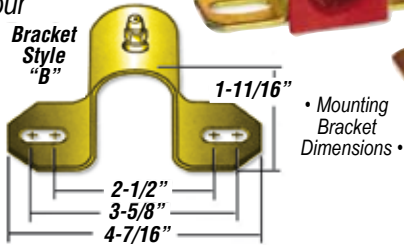

BAR DIAMETER	BRACKET STYLE "B"	BAR DIAMETER	BRACKET STYLE "B"
1/2"	19-1201	1-1/4"	19-1211
9/16"	19-1202	1-5/16"	19-1212
5/8"	19-1203	25mm	19-1213
11/16"	19-1204	26mm	19-1214
3/4"	19-1205	27mm	19-1215
13/16"	19-1206	28mm	19-1216
7/8"	19-1207	29mm	19-1217
15/16"	19-1208	30mm	19-1218
1"	19-1209	31mm	19-1219
1-1/16"	19-1221	32mm	19-1220
1-1/8"	19-1210		

All Sway Bar Bushing Kits are sold in pairs.

## Motor & Transmission Mounts

### Sport Compact Motor & Transmission Mount Bushings & Inserts

(All inserts are designed for manual transmission cars, unless specified.)

Model	Year	Upper Mount	Lower Torque Strut	Front Trans. Mount	Rear Trans. Mount	All Mount Combo Kits
<b>CHEVROLET</b>						
Cobalt 2.2/2.4 Ltr.	05-07	N/A	N/A	7-517 **	7-517 **	N/A
** Manual Only						

Model	Year	Left Mount	Right Mount	Rear Mount	Front Mount	All Mount Combo Kits
<b>FORD</b>						
Focus	12-13	N/A	N/A	6-506 **	N/A	N/A
** Insert						

Model	Year	Left Mount	Right Mount	Rear Mount	Front Mount	All Mount Combo Kits
<b>MITSUBISHI</b>						
EVO 10	08-13	13-512 *†	13-512 *†			
* Bushings † Both Left & Right Locations Set						

#13-512 Motor and Transmission Mount Bushing Kit for '08-13 Mitsubishi Evolution



### Domestic Vehicle Motor & Transmission Mounts - Cars

Model	Year	Engine Size	Motor Mount	Trans. Mount	Mtr./Trans. Mount Combo
<b>CHEVROLET</b>					
Camaro	10-13	6 & 8 cyl.	7-518	N/A	N/A
Corvette	84-96	8 cyl.	7-522	N/A	N/A

Model	Year	Engine Size	Motor Mount	Trans. Mount	Mtr./Trans. Mount Combo
<b>FORD</b>					
Mustang	99-04	4.6/5.4 Ltr. V8		6-1607 <sup>3</sup>	N/A
Mustang	05-06	4.0/4.6 6 & 8 Cyl.	6-505	N/A	N/A
(Note: Any of the above listed engines will also fit any of the listed years.) 3 #6-1607 X member only					

#7-517 Front or Rear Transmission Mount Bushing for 2.2 and 2.4 Ltr. '05-07 Cobalt



#7-522-BL Motor Mount Kit for '84-96 Corvette





## Motor & Transmission Mounts *Continued*

### Domestic Vehicle Motor & Transmission Mounts - SUVs & Trucks

Model	Year	Engine Size	Motor Mount	Trans. Mount	Mtr./Trans. Mount Combo
-------	------	-------------	-------------	--------------	-------------------------

#### DODGE TRUCKS

Trucks 2WD					
All 5.9	94-02	Cummins Diesel	4-507	N/A	N/A
All 5.9	04-08	Cummins Diesel	4-508	N/A	N/A
All 6.7	07-09	Cummins Diesel	4-509	N/A	N/A

Model	Year	Engine Size	Motor Mount	Trans. Mount	Mtr./Trans. Mount Combo
-------	------	-------------	-------------	--------------	-------------------------

#### GM TRUCKS

Trucks 2WD					
S10	85-00	4.3 Ltr. 6 cyl.	7-521	N/A	N/A
Jimmy	85-00	4.3 Ltr. 6 cyl.	7-521	N/A	N/A
*w/Auto. Only					
Trucks 4WD					
S10	85-00	4.3 Ltr. 6 cyl.	7-521	N/A	N/A
Jimmy	85-00	4.3 Ltr. 6 cyl.	7-521	N/A	N/A
*w/Auto. Only **77-84 Only †79-84 Only ††68-72 Only					

Model	Year	Engine Size	Motor Mount	Trans. Mount	Mtr./Trans. Mount Combo
-------	------	-------------	-------------	--------------	-------------------------

#### GM TRUCKS *Continued*

Vans					
Astro	85-00	4.3 Ltr. 6 cyl.	7-521	N/A	N/A
Safari	85-00	4.3 Ltr. 6 cyl.	7-521	N/A	N/A

Model	Year	Engine Size	Motor Mount	Trans. Mount	Mtr./Trans. Mount Combo
-------	------	-------------	-------------	--------------	-------------------------

#### JEEP®

Cherokee (XJ)*	87-99	4.0 Ltr. 6 cyl.	N/A	1-1603	N/A
*w/Auto. Only					

#### LS-1 Motor Mount Adapter Kit for '63-72 GM trucks

The answer to LS-1 engine swaps where the mounts just don't line up with the frame. Made of fully machined 6061 T-6 billet aluminum and with all the correct hardware. Includes a pair of our hi-performance interlocked urethane Motor Mounts.

#7-524 Adapter Kit, includes two #7-509 motor mounts, which are common on '63-72 GM pickup trucks.



## Total Kits cars

### Domestic & Import Cars

Make & Model	Year	Kit #	Ball Joint Boots	Body Mounts	C-Arm Front	C-Arm Rear	Drive Train	Shifter Bushings	Shock Bushings	Spng. Pds/Coil Iso.	Spring/Shackle Rr.	Strut Bushings	Strut Arm/Rod B.	Strut Tower Bush.	Sway Bar Bushings	Sway Bar End Links	Tie Rod Boots	Trans. Mount
Chevrolet Camaro* • w/ Sub-Frame Bushings •	10-13	7-2044		X	X	X						X	X	X				
Chevrolet Camaro* • w/ Sub-Frame Inserts •	10-11	7-2045		X	X	X						X	X	X				
Chrysler 300C	05-10	4-2010	°	X	X	X					X			X	X			
Dodge Challenger	05-10	4-2010	°	X	X	X					X			X	X			
Dodge Charger	05-10	4-2010	°	X	X	X					X			X	X			
Dodge Magnum	05-08	4-2010	°	X	X	X					X			X	X			
Honda Civic • w/Front & Rear Sway Bar Bushings •	06-11	8-2020		X	X									X				
Infiniti G35 • w/Front & Rear Sway Bar Bushings •	03-07	14-2007	°	X	X	X					X			X				
Mitsubishi EVO 8 • w/ Front & Rear Sway Bar Bush. •	03-05	13-2003		X	X	X								X				
Nissan 350Z • w/ Front & Rear Sway Bar Bush. •	03-09	14-2007	°	X	X	X					X			X				
Subaru STI & WRX	08-10	16-2003	°°	X	X	X	X				X							
Subaru WRX	08-10	16-2002	°°	X	X	X	X				X							

(°) Sub Frame Bushings (°°) Sub Frame Insert Bushings

#### WRX & STI '08-10 Total Kits

This suspension kit includes bushings and components for the front control arms, steering rack, shifter stay rod, rear control arms, differential carrier members and rear subframe.

2008-10 SUBARU WRX TOTAL KIT #16-2002-BL

STI TOTAL KIT #16-2003-BL



## Total Kits SUVs & Trucks

## Domestic & Import SUVs & Trucks

Make & Model	Year	Kit #	Axle Pivot Bush.	Body Mounts	"C" Bushings	C-Arm Front	C-Arm Rear	Spring Pads	Front Diff. Mount	Spring/Shackle Rt.	Strut Arm/Rod B.	Sway Bar Bushings	Sway Bar End Links	Tie Rod Boots	Torque Arm Bush.	Track Arm-Front	Track Arm-Rear	Trans. Mount
GM Silverado & Sierra 1500 & 2500 Crew Cabs 2WD	07-14	7-2046	X		X				X	X	X	X						
GM Silverado & Sierra 1500 & 2500 Crew Cabs 4WD	07-14	7-2047	X		X			X	X	X	X	X						
Dodge Ram 2500 & 3500, 4WD Diesel & V-10	94-01	4-2008		X	X				X	X						X		
Ford Full Size Truck 2WD & 4WD F150	04-06	6-2038			X				X	X	X	X	X					
Ford Van E250 2WD & E350 2WD	92-06	6-2039	X						X	X	X	X	X					
Honda CR-V ††	97-01	8-2021				X	X											
Jeep Wrangler JK 4DR*	07-11	1-2017		X	X	X				X	X	X			X	X		
Jeep Wrangler JK 2DR*	07-11	1-2018		X	X	X				X	X	X			X	X		

(††) Includes: Ball Joint Boots, Compensator Arm Bushings, Shock Bushings, Tie Rod Boots (\*) Includes Bump Stops

## Specific Applications


### Chevrolet Camaro

<b>BUMP STOPS</b>			
67-69 Front Lower C-Arm Bump Stops (2)		7-1301	
<b>CONTROL ARM BUSHINGS, Front</b>			
10-13 C-Arm Bushing Kit, w/o Shells		7-238	
<b>CONTROL ARM BUSHINGS, Rear</b>			
10-13 C-Arm Bushing Kit, w/o Shells		7-319	
<b>LINK BUSHINGS, Rear</b>			
10-13 Toe & Trailing Arm Link Bushing Kit		7-1214	
<b>RACK &amp; PINION BUSHINGS</b>			
10-13 Rack & Pinion Bushing Kit		7-703	
<b>RADIUS ARM BUSHINGS, Front</b>			
10-13 Radius Arm Bushing Kit (Front Forward)		7-239	
<b>REAR SUBFRAME</b>			
10-13 Rear Subframe Bushing Kit		7-142	
10-11 Rear Subframe Bushing Insert Kit		7-146	
<b>SWAY BAR BUSHINGS, Front</b>			
82-92 Sway Bar Bushing Kit, 28mm		7-241	
10-13 Sway Bar Bushing Kit (Front & Rear)		7-1192	
<b>SWAY BAR BUSHINGS, Rear</b>			
10-13 Sway Bar Bushing Kit (Front & Rear)		7-1192	
<b>TOTAL KITS</b>			
10-13 Total Kit		7-2044	
10-11 Total Kit, w/Sub-Frame Inserts		7-2045	

### Chevy/GMC Full Size Trucks

<b>BALL JOINT BOOTS</b>			
63-95 Ball Joint Boot Kit			19-1820
<b>BODY &amp; CAB MOUNTS, 2WD &amp; 4WD</b>			
(Silverado/Sierra 1500 & 2500 Crew Cab, Avalanche)			
99-14 All Cabs - Body Mount Kit			7-141
(Silverado/Sierra 1500 & 2500 Single Cab)			
10-13 Body Mount Kit			7-147
<b>CONTROL ARM BUSHINGS, Front</b>			
(Silverado/Sierra 1500 & 2500 2 & 4WD)			
07-14 Control Arm Bushing Kit, w/o Shells			7-243
(Trail Blazer SS 4WD)			
02-09 Control Arm Bushing Kit, w/o Shells			7-242
<b>DRIVETRAIN</b>			
(Silverado/Sierra 1500 & 2500 4WD)			
07-14 Front Differential Mount Kit			7-1614
<b>SPRING &amp; SHACKLE BUSHINGS, Rear</b>			
(Silverado/Sierra 1500 & 2500, 2 & 4WD)			
99-14 Spring Eye & Shackle Bushing Kit			7-1055
<b>SWAY BAR BUSHINGS, Front &amp; Rear</b>			
(Silverado/Sierra 1500 & 2500, 2 & 4WD)			
07-14 Front Sway Bar Bushing Kit, 36mm Bar			7-1193
(Trailblazer 2WD)			
02-09 Front Sway Bar Bushing Kit, 44mm Bar			7-1186
02-09 Front Sway Bar Bushing Kit, 46mm Bar			7-1184
02-09 Rear Sway Bar Bushing Kit, 24mm Bar			7-1185
<b>TOTAL KITS</b>			
(Silverado/Sierra 1500 & 2500 Crew Cab 2WD)			
07-14 Total Kit			7-2046
(Silverado/Sierra 1500 & 2500 Crew Cab 4WD)			
07-14 Total Kit			7-2047

#7-2046 Chevy & GMC Full Size 2WD '07-14 Total Kit

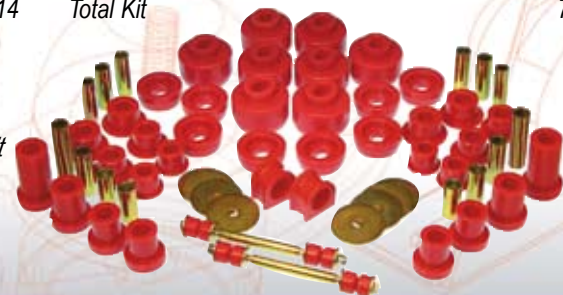



## Specific Applications

### Chrysler Dodge/Plymouth/Mid-Size Cars

#### CONTROL ARM BUSHINGS, Front

(Dart, Demon, Duster, Swinger, Valiant, Scamp, thru 69 Barracuda)

62-76	C-Arm Bush. Kit "A" Body w/Shells Upper Only	4-225
(Charger, Coronet, Superbee, Roadrunner, Satellite)		
62-76	C-Arm Bush. Kit "B" Body w/Shells Upper Only	4-225
(Challenger, Barracuda)		
62-76	C-Arm Bush. Kit "E" Body w/Shells Upper Only	4-225
(Chrysler 300C, Challenger, Charger, Magnum)		
05-10	Control Arm Bushing Kit	4-218

#### CONTROL ARM BUSHINGS, Rear

(Chrysler 300C, Dodge Challenger, Charger, Magnum)

05-10	Control Arm Bushing Kit	4-220
-------	-------------------------	-------

#### DIFFERENTIAL BUSHING KIT

(Chrysler 300C, Dodge Challenger, Charger, Magnum)

08-10	Differential Bushing Kit	4-1607
-------	--------------------------	--------

#### RACK & PINNION BUSHINGS

(Chrysler 300C, Dodge Challenger, Charger, Magnum)

05-10	Rack and Pinnion Bushing Kit	4-702
-------	------------------------------	-------

#### SUB FRAME BUSHINGS

(Chrysler 300C, Dodge Challenger, Charger, Magnum)

08-10	Sub Frame Bushing Kit	4-109
-------	-----------------------	-------

#### SWAY BAR BUSHINGS

(Chrysler 300C, Dodge Challenger, Charger, Magnum)

05-10	Front Sway Bar Bushing Kit, 27mm Bar	4-1140
05-10	Front Sway Bar Bushing Kit, 30mm Bar	4-1141
05-10	Front Sway Bar Bushing Kit, 32mm Bar	4-1142
05-10	Rear Sway Bar Bushing Kit, 11/16" Bar*	4-1139
*(This Kit Includes End Link Bushings)		

#### TOTAL KITS

05-10	Chrysler 300C	4-2010
05-10	Dodge Challenger	4-2010
05-10	Dodge Charger	4-2010
05-08	Dodge Magnum	4-2010

### Dodge Trucks

#### TOTAL KITS

94-01	Total Kit (Ram 2500 & 3500 4WD, Diesel & V10)	4-2008
-------	---	--------

### Challenger, Charger & 300C '05-10 and '05-08 Magnum, LX PLATFORM Total Kits

The stock LX platform is designed for comfort, with excessively soft bushings throughout the suspension system, resulting in sloppy and poor handling. This Total Kit delivers superior handling/stability and a better ride! Contains: rear control arm bushing kit, differential bushing kit, sub frame bushing kit, front control arm bushings, rack & pinion bushing kit, front and rear sway bar bushings. 2005-10 CHALLENGER, CHARGER, 300C & 2005-08 MAGNUM

TOTAL KIT #4-2010



### FORD Mustang

#### SHIFTER BUSHINGS

11-13	Shifter Bushing only (fits OEM or our billet bracket)	6-1612
11-13	Shifter Bushings With Billet Bracket Kit	6-1614
11-13	Shifter Bracket only (works with our bushing or OEM)	6-1613

### Ford GT

#### MOTOR AND TRANSMISSION MOUNT

(Ford GT)

04-06	Two Motor Mounts Sets, Transmission Top Mount	6-1906
-------	---	--------

### Ford Full Size Trucks

#### AXLE PIVOT BUSHINGS

(E250, E350 2WD Van)

92-06	Axle Pivot Bushing Kit	6-603
-------	------------------------	-------

#### BODY & CAB MOUNTS, 2WD & 4WD

(Bronco II)

84-88	20 Bushing Kit	6-104
(Explorer Sport Trac)		
01-05	Bushing Kit	6-116

#### C-BUSHINGS, RADIUS ARM BUSHINGS, TRACK ARM BUSHINGS

(E250, E350 2WD Van)

92-06	Front Strut Arm Bushing Kit	6-1207
-------	-----------------------------	--------

#### CONTROL ARM BUSHINGS, Front

(F150 2WD & 4WD)

04-06	Front Control Arm Bushing Kit	6-221
-------	-------------------------------	-------

#### SPRING & SHACKLE BUSHINGS, Rear 2WD

(F100, F150 2WD)

04-06	Spring Eye & Shackle Bushing Kit	6-1055
(E250, E350 2WD Van)		
92-06	Spring Eye & Shackle Bushing Kit	6-1021

#### SWAY BAR BUSHINGS, Front & Rear

(F150, 2WD & 4WD) (F250, 2WD & 4WD Light Duty)

04-06	Front Sway Bar Bushing Kit, 34mm Bar*	6-1168
(E250, E350 2WD Van)		
92-06	Front Sway Bar Bushing Kit, 1" Bar*	6-1151
*(Includes End Link Bushings)		

#### TOTAL KITS

(F150 2 & 4WD)

04-06	Total Kit F150 2 & 4WD	6-2038
-------	------------------------	--------

### Ford Trucks, Ranger

#### SPRING & SHACKLE BUSHINGS, Rear

(2WD & 4WD)

98-08	Leaf Spring Bushing Kit (Ranger 4WD)	6-1027
-------	--------------------------------------	--------

### F-150 2 & 4 WD '04-06 Total Kit

Includes urethane bushings and components for the front control arms, front sway bar and rear leaf springs, replacing inferior OEM rubber. All are designed to provide improved handling and a more stable, controllable ride. 2004-06 F-150 2 & 4WD TOTAL KIT #6-2038-BL



## Specific Applications

### Honda

#### BALL JOINT BOOTS

(CR-V)  
97-01 Front Ball Joint Boots 8-1701

#### CONTROL ARM BUSHINGS, Front

(Civic/CRX/Del Sol\*\*)  
06-11 Front Control Arm Bushing Kit 8-223

(CR-V)  
97-01 Front Control Arm Bushing Kit 8-218

#### CONTROL ARM BUSHINGS, Rear

(Civic/CRX/Del Sol\*\*)  
06-11 Control Arm Bushing Kit 8-319

(CR-V)  
97-01 Rear Control Arm Bushing Kit 8-306

97-01 Rear Compensator Bushing Kit 8-309

#### SHOCK BUSHINGS

(CR-V)  
97-01 Front Shock Bushing Kit 8-901

97-01 Rear Shock Bushing Kit 8-904

#### STEERING

(Civic/CRX/Del Sol)  
96-00 Rack & Pinion Bushing Kit 8-704

#### SWAY BAR & END LINKS, Front

(Civic/CRX/Del Sol\*\*)  
06-11 Sway Bar Bushing Kit (Front & Rear) 8-1143

#### SWAY BAR BUSHINGS, Rear

(Civic/CRX/Del Sol\*\*)  
06-10 Sway Bar Bushing Kit, 11mm Bar 8-1141

06-10 Sway Bar Bushing Kit, 17mm Bar 8-1142

06-10 Sway Bar Bushing Kit, 28mm 8-1140

06-11 Sway Bar Bushing Kit (Front & Rear) 8-1143

#### TIE ROD BOOTS

97-01 Tie Rod Boot Kit (CR-V) 19-1711

#### TOTAL KITS\*

(Civic, CRX, Del Sol\*\*)  
06-11 Total Kit 8-2020

(CR-V)  
97-01 Total Kit (with Compensator Arm Bushings) 8-2021

\*(Total Kits do not contain the Rear Trailing Arm Bushings)

\*\* (For 93-97 Del Sol use 92-95 Civic listings)

### Honda CR-V '97-01 Total Kit

This kit replaces the stock rubber suspension parts with superior PROTHANE urethane components. It includes seven performance bushing kits. Combined, they all provide improved handling control, for a stable ride and predictable handling.



1997-01 CR-V  
TOTAL KIT  
#8-2021-BL

### Infiniti

(G35)

#### DIFFERENTIAL BUSHING SET

03-07 Differential Bushing Kit 14-1603

#### CONTROL ARM BUSHING SET, FRONT

03-07 Control Arm & Radius Arm Bushing Kit 14-210

#### CONTROL ARM BUSHING SET, REAR

03-07 Control Arm, Radius Arm, Lower Link Bush. 14-307

#### STEERING

03-07 Rack & Pinnion Bushing Kit 14-706

#### SUBFRAME BUSHING SET

03-07 Subframe Bushing Kit 14-103

#### SWAY BAR BUSHINGS, FRONT

03-07 Front Sway Bushing Kit, 1 1/4" Bar 14-1124

#### SWAY BAR BUSHINGS, REAR

03-07 Rear Sway Bar Bushing Kit, 21mm 14-1125

#### TOTAL KIT

03-07 Total Kit 14-2007

### Infiniti G35 '03-07 & Nissan 350Z '03-09 Total Kit



This kit restores and upgrades the performance and durability of 350Zs & G35s by replacing all suspension, steering, subframe and differential bushings—front to rear!  
2003-09 NISSAN 350Z  
and 2003-07 INFINITI G35  
TOTAL KIT #14-2007

### Jeep®

(Wrangler JK)

#### BODY MOUNTS

07-11 12 Bushing Kit (4 door) 1-117

07-11 8 Bushing Kit (2 door) 1-118

#### BUMP STOPS

(Wrangler JK)

07-11 Front Bump Stops (2 & 4 door) 1-1303

07-11 Rear Bump Stops (2 & 4 door) 1-1304

(Wrangler TJ)

97-06 Rear Bump Stops 1-1707

#### CONTROL ARM BUSHINGS, FRONT & REAR


(Wrangler JK)

07-11 Front C-Arm Bushing Kit (2 & 4 door) 1-211

07-11 Rear C-Arm Bushing Kit (2 & 4 door) 1-302

### Jeep Cherokee XJ '87-99 Trans Mount Kit

"Get Rid Of The Clunk!" If your Jeep Cherokee XJ's exhaust or hanger bracket is hitting the center crossmember, most likely the factory mount is now junk! Our urethane mount offers much greater strength and durability!  
1987-99 JEEP XJ 4.0L 4WD,  
AUTO TRANS. MOUNT #1-1603

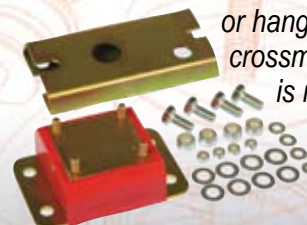



## Specific Applications

### Jeep® *Continued*

#### SWAY BAR BUSHINGS, FRONT & REAR

(Wrangler JK)

07-11	Front Sway Bar Bushing Kit, 31mm Bar	1-1127
07-11	Rear Sway Bar Bushing Kit, 19mm Bar w/Endlinks	1-1128

#### TRACK ARM BUSHINGS, FRONT & REAR

(Wrangler JK)

07-11	Front Track Bar Bushing Kit (2 & 4 door)	1-1209
07-11	Rear Track Bar Bushing Kit (2 & 4 door)	1-1210

#### TRANSMISSION MOUNTS

(Cherokee XJ)

87-99	Transmission Mount Kit (XJ 4.0L)	1-1603
-------	----------------------------------	--------

#### TOTAL KITS

(Wrangler JK)

07-11	Total Kit (4 door)	1-2017
07-11	Total Kit (2 door)	1-2018

### Jeep Wrangler JK 2DR & 4DR '07-11 Total Kits

Both are comprised of nine component kits, all to greatly improve handling and durability. From sway bar bushings & end links, body mounts, control arm bushing sets, to track bar bushings and more.

JK 2007-11

2 Door #1-2018, 2007-11

4 Door #1-2017



### Mazda

(Miata)

#### CONTROL ARM BUSHINGS, FRONT & REAR

90-97	Front Control Arm Bushing Kit	12-204
90-97	Rear Control Arm Bushing Kit	12-301

#### DRIVETRAIN

90-97	Rear Differential Bushing Kit	12-1601
-------	-------------------------------	---------

#### SWAY BAR BUSHINGS, FRONT

90-97	Front Sway Bar Bushing Kit, 19mm Bar	12-1108
-------	--------------------------------------	---------

### Mitsubishi cars

#### CONTROL ARM BUSHINGS, FRONT AND REAR

(Eclipse)

00-05	Front Control Arm Bushing Kit	13-205
-------	-------------------------------	--------

(Lancer Evolution)

03-13	Front Control Arm Bushing Kit, Lower Inner	13-204
03-06	Rear Control Arm Bushing Kit, Upper	13-303

(Lancer Evolution)

#### DRIVETRAIN

95-06	Rear Diff. Bracket Mount Bushing Kit	13-1610
-------	--------------------------------------	---------

#### MOTOR & TRANS. MOUNT BUSHINGS & INSERTS

08-13	Engine & Trans. Mount Bushing Kit (Right & Left)	13-512
-------	--	--------

#### SWAY BAR BUSHINGS, FRONT

03-06	Sway Bar Bushing Kit, 24mm Bar	13-1108
-------	--------------------------------	---------

#### SWAY BAR BUSHINGS, REAR

03-06	Sway Bar Bushing Kit, 22mm Bar	13-1109
-------	--------------------------------	---------

#### TOTAL KITS

03-06	Lancer Evolution Total Kit	13-2003
-------	----------------------------	---------

### Nissan cars

(350Z)

#### CONTROL ARM BUSHINGS, FRONT & REAR

03-09	Front Control Arm & Radius Arm Bushing Kit	14-210
03-09	Rear C. Arm, Radius Arm, Lower Link Bush. Kit	14-307

#### DRIVETRAIN

03-09	Differential Bushing Kit	14-1603
-------	--------------------------	---------

#### STEERING

03-09	Rack & Pinnion Bushing Kit	14-706
-------	----------------------------	--------

#### SWAY BAR BUSHINGS, FRONT & REAR

03-09	Front Sway Bar Bushing Kit, 1 1/4" Bar	14-1124
03-09	Rear Sway Bar Bushing Kit, 21mm Bar	14-1125

#### TOTAL KITS

03-09	Total Kit	14-2007
-------	-----------	---------

### Scion

#### SHIFTER BUSHINGS

(FR-S)

2013	Manual Shifter Bushing Kit (5 Spd.)	16-1602
2013	Manual Shifter Bushing Kit (6 Spd.)	16-1603
2013	Manual Shifter Rear Bushing (5 & 6 Spd.)	16-1604

### Subaru

#### CONTROL ARM BUSHINGS

(STI)

08-10	Front Control Arm Bushing Kit	16-304
-------	-------------------------------	--------

(WRX)

08-10	Rear Lower Control Arm Bushing Kit	16-302
-------	------------------------------------	--------

#### SHIFTER BUSHINGS

(BRZ)

2013	5 Spd. Manual Shifter Bushing Kit	16-1602
2013	6 Spd. Manual Shifter Bushing Kit	16-1603
2013	Rear Manual Shifter Bushing (5 & 6 Spd.)	16-1604

#### SUBFRAME

(STI & WRX)

08-10	Subframe Insert Kit	16-140
-------	---------------------	--------

### WRX & STI '08-10 Subframe Insert Kit

This kit will make a world of difference of how a WRX or STI will handle! This insert kit eliminates all voids in the OEM bushings.



2008-10 SUBARU WRX & STI SUBFRAME INSERTS #16-140-BL

### BRZ & FR-S '13 Shifter Bushing Kits

These performance urethane shifter bushing kits dramatically allows confident & precise shifts going from shift gate to gate.

2013 Scion FR-S & Subaru BRZ

5-SPEED COMPLETE KIT

#16-1602 6-SPEED COMPLETE

KIT #16-1603, BOTH 5 & 6-SPEED

REAR BUSHING #16-1604



# HIGH PERFORMANCE URETHANE



**BODY MOUNTS  
BUMP STOPS  
CONTROL ARM BUSHINGS  
LIFT KITS  
MOTOR MOUNTS  
SWAY BAR BUSHINGS  
TOTAL KITS  
TRANS. MOUNTS  
& MORE!**

## **PROTHANE Innovations You Should Know About:**

### **GM LS-1 Motor Mount Adapter Kit**

The answer to those GM LS-1 engine swaps where the mounts just don't line up with the proper frame location. Made of fully machined 6061 T-6 billet aluminum and includes our interlocking urethane motor mounts and hardware. LS-1 Car Adapter Pair Kit (with Short & Wide Mounts) #7-519  
LS-1 Car Adapter Pair Kit (with Tall & Narrow Mounts) #7-520

### **Camaro Gen 5 '10-13 Motor Mount Kit**

Our exclusive "Bullet Design" mounts are fully machined billet aluminum mounts, coupled with a special urethane to provide the ultimate performance. #7-518

### **Ford Mustang '05-06 "Bullet" Motor Mounts**

"Bullet" Mustang motor mounts are the answer to solving the stock motor mount failures. Features our revolutionary urethane compound between stylish fully machined billet aluminum brackets. For 4.0L V6 & 4.6L V8s. #6-505

### **Mustang Custom Transmission Conversions**

HD poly locked trans. mounts and a unique crossmember provides adjustability for various factory tolerances. '99-04 Mustang Trans. Mount with X Member #6-1606  
'99-04 Mustang X Member only #6-1607  
'79-98 Mustang Mount only for Tremec T56 6 spd. #6-1608

Distributed By:

**TOLL FREE: (888) PROTHANE**

3560 Cadillac Avenue, Costa Mesa, CA 92626

**[www.prothane.com](http://www.prothane.com)**

**PROTHANE IS A DIVISION OF DEE ENGINEERING**

Part No. Z2014-URE-NP



Disclaimer: The use of recognized automobile manufacturers (i.e. Chevrolet, Ford, Chrysler, Honda, Toyota & Volkswagen) and their respective model names/numbers (i.e. Chevelle, Corvette, Cobalt, Dodge Ram, Ford F-150/F-250, Scion & VW Golf) for DEE ENGINEERING, Inc. is for the sole purpose of application and description and in no way denotes their use to intend a direct connection between DEE ENGINEERING, Inc. or PROTHANE™ Products and those automobile manufacturers or factories.

**PROTHANE is a Division of DEE Engineering Inc.**

3560 Cadillac Ave., Costa Mesa, CA 92626 • Phone: 714-979-4990 • FAX: 714-979-3468

TOLL FREE TECH LINE 888-776-8426 • TOLL FREE FAX 800-458-7869